



- (85)** - Ground connection -1-, in engine compartment wiring harness
- (D22)** - Connector (over fuse 234), in wiring harness front, right
- (D110)** - Wire connection -8-, in engine compartment wiring harness