

Ti Kan: Audi Symphony Radio



Please perform the following procedures while the car is parked. Otherwise you risk getting into an accident while your attention is not focused on the driving.

Entering anti-theft code

The following is the procedure to re-activate the radio if the display shows "SAFE". It is important that the procedure be followed in the correct order.

1. Turn on radio. The radio display shows "SAFE".
2. Press the P.Scan and RBDS buttons simultaneously and hold until "1000" shows on the display. Release the buttons. Do NOT press these buttons again, otherwise the radio will consider "1000" to be the code.
3. Use Preset buttons 1 ... 4 to enter the four-digit code number from your radio card. Preset button 1 corresponds to the first digit, Preset button 2 corresponds to the second digit, etc. Each press of the button increments the number by 1.
4. Once the code shown on the display is correct, press the P.Scan and RBDS buttons simultaneously and hold until the word "SAFE" appears in the display, then release the buttons.
5. The radio should unlock and be usable shortly afterwards.
6. If an incorrect code is entered, the word "SAFE" appears, first flashing and then continuously. You can repeat the above steps to unlock the radio once more, the number of attempts will be shown in the display. If an incorrect code is entered again, your radio will be locked for about one hour. After one hour - the radio must stay on and the key must remain in the ignition lock - if the display goes out, you can repeat the above procedure to unlock again. The cycle - two attempts, one hour lock-up - still applies.
7. If you lose your radio code, contact your Audi dealer.

Radio Frequency Information

The following is the procedure on how to access the actual radio frequency auto fine-tuning information display.

1. Turn off radio.
2. While pressing and holding the Preset 1 button, turn on radio.
3. The display shows the actual radio frequency. It is constantly changing as the radio adapts and selects the strongest signal. While in FM mode, pressing the AM1 and AM2 buttons toggles the display between two modes rather than switching to AM. To switch to AM, you can first change to CD or CDC, then go to AM1 or AM2. This is a display-only mode. You cannot change any settings.
4. When you are done, turn off radio, then turn it back on for normal operation.

Speed-sensitive Volume Control Information

The following is the procedure on how to access the Speed-sensitive auto-volume compensation display.

1. Turn off radio.
2. While pressing and holding the Preset 2 button, turn on radio.
3. The display shows how many decibels the SVC has increased the volume. This is a display-only mode. You cannot change any settings.
4. When you are done, turn off radio, then turn it back on for normal operation.

CD Changer Detection

The following is the procedure on how to access the CD changer detection display.

1. Turn off radio.
2. While pressing and holding the Preset 4 button, turn on radio.
3. If you have a CD changer connected and functional, the display shows "CONNECT". Otherwise, it shows "NO CDC". This is a display-only mode. You cannot change any settings.
4. When you are done, turn off radio, then turn it back on for normal operation.

Hidden Equalizer

The following is the procedure on how to access and adjust the "hidden" equalizer feature in the Audi Symphony radio.

1. Turn off radio.
2. While pressing and holding the Preset 5 button, turn on radio.
3. You'll see a series of 8 digits displayed. From the factory, it's set to "55555555". You will not hear any sound when running in this mode.
4. The first four digits correspond to the four equalizer bands (low, low-mid, upper-mid, high) for the front speakers, and the last four digits are the same for the rear speakers. The level can be set from 1 (minimum) to 9 (maximum).
5. Turn the volume control knob to increase or decrease the level for the band (which is blinking). To advance to the next band, press the P.Scan button.
6. When you are done, turn off radio, then turn it back on to hear the results. On some versions of the Symphony, you must also cycle the ignition key to hear the results.

Other Preferences & Configurable Options

The following is the procedure on how to access some other preferences that you may set in the Audi Symphony radio.

1. Turn off radio.
2. While pressing and holding the P.Scan button, turn on radio.
3. You'll see something like "SVC 3" on the display. This is the adjustment of the effect of the Speed-sensitive Volume Control.
4. Turn the tuning knob (right side knob) to increase or decrease the effect, the range is from 1 to 5 (5 is maximum).
5. Press the P.Scan button to advance to the next adjustable parameter and you can use the tuning knob in the same way. Repeat this until it cycles back to the "SVC" mode.
6. When you are done, turn off radio, the setting will be remembered the next time the radio is turned on.
7. The table below shows a list of parameters that can be adjusted in this manner.

Parameter	Description
SVC	Speed-sensitive Volume Control (auto-volume compensation) effect
VOL	Turn-on volume setting
SENS	Station-scan sensitivity (DX/Local)
REM	Radio Monitoring (whether radio should come on while cassette is rewinding or fast-forwarding) (OFF/ON)
NAV	Navigation system audio mute amount
TEL	Hands-free telephone speaker left or right (L/R) No effect on Bose-equipped systems.

TA	Traffic Announcement volume The volume of traffic announcements (independent of music volume). This is applicable to radios with this capability, and operated in an area with such a service.
----	---

Standard/Bose and other configuration modes

You can program the Symphony radio to use either the standard or the Bose equalization setting, as well as a few other basic configurations. This requires the use of a VAG-1551, VAG-1552 or equivalent scan tool (See [VAG-COM](#) or [ProDiag](#)). Knowledge of the usage of such a scan tool is assumed.

Note: Some Symphony radios have difficulty communicating with VAG-COM (probably due to timing sensitivity). Please visit the [Ross-Tech](#) web site for further information.

1. Connect scan tool to the car's OBD-II diagnostic port.
2. Turn on ignition and radio, select Radio Controller in scan tool.
3. The radio shows "DIAG" in the display.
4. Select "Recode Module". You may enter a 5-digit code according to the table below. For example, "00007" is a standard setting while "00017" is a Bose setting, both with CD changer and secondary display.
5. Turn off radio and ignition, disconnect scan tool.
6. Turn on radio to hear the effects. In Bose mode, the radio display will show "BOSE" briefly after turn-on.

Digit	Description
1	Country ID (0 = standard)
2	Sound Coordination (0 = standard)
3	Number of passive speakers 0 = No passive speakers (Bose) 1 = Front left (Bose with hands-free phone) 2 = Fronts passive, rears active 5 = Passive fronts, non-active rears
4	Sound System 0 = standard 1 = Bose
5	Radio Configuration 1 = No CD changer 3 = With CD changer 5 = With secondary display 7 = With CD changer and secondary display

Note: Programming the radio to run in Bose mode does not make it a Bose system if it wasn't installed at the factory as such. The Bose system also has an different external amplifier and different speakers.

[Audi Radios Reference](#)

[Main Page](#) [Personal Audio Software](#) [Art](#) [Audi Links](#) [Contact](#)