

Fitting location

In luggage compartment on left, behind side trim -1-.

Note

- ♦ The digital sound package control unit -J525- is only installed in conjunction with noise compensation ANC (EP0).
- ♦ In the Audi sound system (9VD) without noise compensation ANC (EP0), the speakers are connected to the digital sound package control unit -J525-.

1 - Digital sound package control unit -J525-


A - 38-pin connector -T38- , black

- Connector assignment in conjunction with Radio (8DN, 8DP, 8DS) ⇒ [page 43](#)
- Connector assignment in conjunction with MMI Navigation plus (I8H) ⇒ [page 44](#)

B - 18-pin connector -T18i- , black

- Connector assignment in conjunction with Radio (8DN, 8DP, 8DS) ⇒ [page 43](#)
- Connector assignment in conjunction with MMI Navigation plus (I8H) ⇒ [page 44](#)

C - 2-pin connector -T2ca- , MOST bus, black

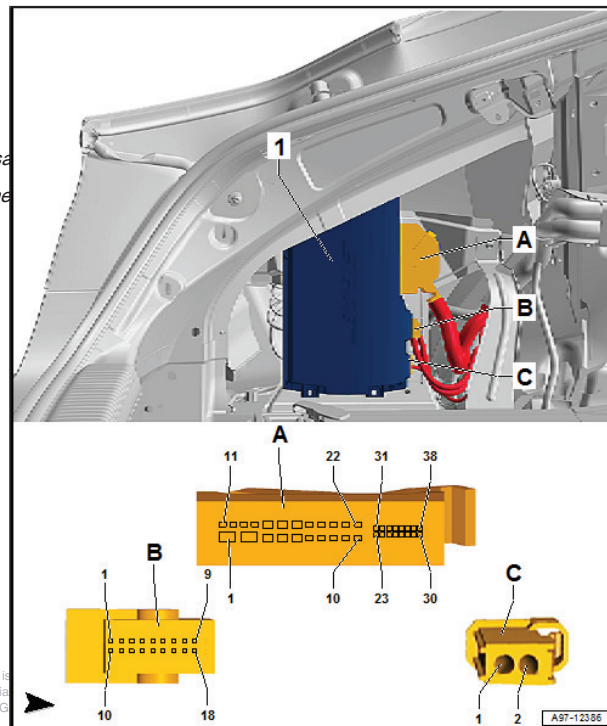

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG

Connector assignment digital sound package control unit -J525- , Radio (8DN, 8DP, 8DS)

-T18i- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
1		1	Terminal 30, from fuse carrier 4 -ST4- in fuse holder F -SF-	20	Front right mid-range loudspeaker -R104-
2		2	Terminal 31, to (50) earth point on left in luggage compartment	21	Front right loudspeaker -R3-
3		3	Rear right bass loudspeaker -R17- Rear right treble loudspeaker -R16-	22	Front left loudspeaker -R2-

-T18i- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
4		4	Front left bass loudspeaker -R21-	23	
5		5	Subwoofer -R211-	24	
6	Noise cancellation microphone 3 -R287-	6		25	Ring break diagnostic cable to connection 1 (diagnosis) in main wiring harness B444
7	Noise cancellation microphone 3 -R287-	7	Front left mid-range loudspeaker -R103-	26	
8	Noise cancellation microphone 4 -R288-	8	Front right mid-range loudspeaker -R104-	27	
9	Noise cancellation microphone 4 -R288-	9	Front right loudspeaker -R3-	28	
10	Engine control unit -J623- / Power unit mounting control unit -J931-	10	Front left loudspeaker -R2-	29	
11	Terminal 31, to 397 earth connection 32 in main wiring harness	11	Front right bass loudspeaker -R23-	30	
12		12	Front right bass loudspeaker -R23-	31	Centre loudspeaker -R208-
13	Noise cancellation microphone 2 -R286-	13	Rear left bass loudspeaker -R15- / Rear left treble loudspeaker -R14-	32	Centre loudspeaker -R208-
14	Noise cancellation microphone 2 -R286-	14	Rear left bass loudspeaker -R15- / Rear left treble loudspeaker -R14-	33	
15		15	Rear right bass loudspeaker -R17- / Rear right treble loudspeaker -R16-	34	
16	Noise cancellation microphone 1 -R285-	16	Front left bass loudspeaker -R21-	35	
17	Noise cancellation microphone 1 -R285-	17	Subwoofer -R211-	36	
18		18		37	
		19	Front left mid-range loudspeaker -R103-	38	

Back to overview [⇒ page 1](#) .

Connector assignment digital sound package control unit -J525- , MMI Navigation plus (I8H)

-T18i- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
1		1	Terminal 30, from fuse carrier 4 -ST4- in fuse holder F -SF-	20	Rear right bass loudspeaker -R17- Rear right treble loudspeaker -R16-
2		2	Terminal 31, to 50 earth point on left in luggage compartment	21	

-T18I- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
3		3		22	
4		4	Subwoofer -R211-	23	
5		5		24	
6	Noise cancellation microphone 3 -R287-	6		25	Ring break diagnostic cable to (B444) connection 1 (diagnosis) in main wiring harness
7	Noise cancellation microphone 3 -R287-	7	Rear left bass loudspeaker -R15- / Rear left treble loudspeaker -R14-	26	Front right mid-range loudspeaker -R104-
8	Noise cancellation microphone 1 -R285-	8	Rear right bass loudspeaker -R17- Rear right treble loudspeaker -R16-	27	Front right mid-range loudspeaker -R104-
9	Noise cancellation microphone 1 -R285-	9		28	
10	Engine control unit -J623- / Power unit mounting control unit -J931-	10		29	
11	Terminal 31, to (397) earth connection 32 in main wiring harness	11	Front left bass loudspeaker -R21-	30	
12		12	Front left bass loudspeaker -R21-	31	Centre loudspeaker -R208-
13	Noise cancellation microphone 4 -R288-	13	Front right bass loudspeaker -R23-	32	Centre loudspeaker -R208-
14	Noise cancellation microphone 4 -R288-	14	Front right bass loudspeaker -R23-	33	Front right loudspeaker -R3-
15		15		34	Front right loudspeaker -R3-
16	Noise cancellation microphone 2 -R286-	16	Subwoofer -R211-	35	Front left loudspeaker -R2-
17	Noise cancellation microphone 2 -R286-	17		36	Front left loudspeaker -R2-
18		18		37	Front left mid-range loudspeaker -R103-
		19	Rear left bass loudspeaker -R15- / Rear left treble loudspeaker -R14-	38	Front left mid-range loudspeaker -R103-

Back to overview → [page 1](#) .

1.34 Fitting location digital sound package control unit -J525- , Bose Surround Sound (8RY), from model year 2015

Fitting location

In luggage compartment on left, behind side trim -1-.

1 - Digital sound package control unit -J525-


A - 38-pin connector -T38- , black

- ☐ Connector assignment in conjunction with Radio (8DN, 8DP, 8DS) ⇒ [page 46](#)
- ☐ Connector assignment in conjunction with MMI Navigation plus (I8H) ⇒ [page 48](#)

B - 18-pin connector -T18i- , black

- ☐ Connector assignment in conjunction with Radio (8DN, 8DP, 8DS) ⇒ [page 46](#)
- ☐ Connector assignment in conjunction with MMI Navigation plus (I8H) ⇒ [page 48](#)

C - 2-pin connector -T2ca- , MOST bus, black

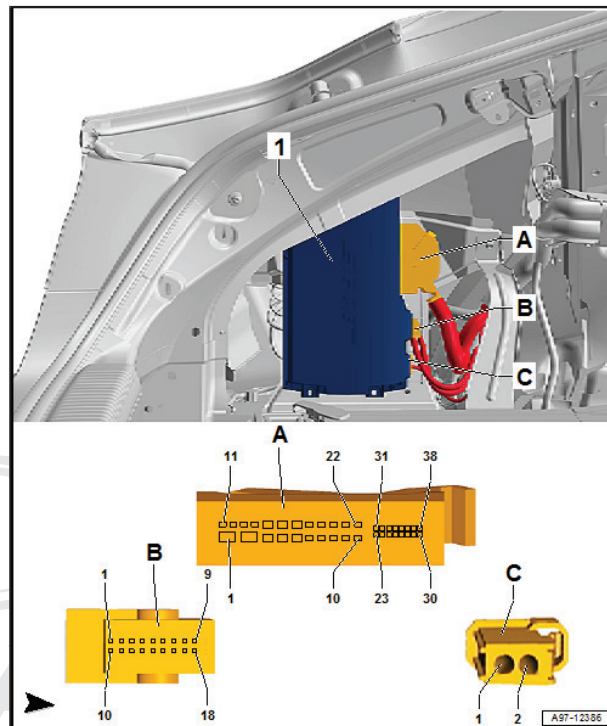

Connector assignment digital sound package control unit -J525- , Radio (8DN, 8DP, 8DS)

-T18i- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
1		1	Terminal 30, from fuse carrier 4 -ST4- in fuse holder F -SF-	20	Front right mid-range loudspeaker -R104-
2		2	Terminal 31, to 50 earth point on left in luggage compartment	21	Front right loudspeaker -R3-
3		3	Rear right bass loudspeaker -R17- Rear right treble loudspeaker -R16-	22	Front left loudspeaker -R2-

-T18l- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
4		4	Front left bass loudspeaker -R21-	23	
5		5	Subwoofer -R211-	24	
6	Noise cancellation microphone 3 -R287- ¹⁾	6		25	Ring break diagnostic cable to (B444) connection 1 (diagnosis) in main wiring harness
7	Noise cancellation microphone 3 -R287- ¹⁾	7	Front left mid-range loudspeaker -R103-	26	
8	Noise cancellation microphone 4 -R288- ¹⁾	8	Front right mid-range loudspeaker -R104-	27	
9	Noise cancellation microphone 4 -R288- ¹⁾	9	Front right loudspeaker -R3-	28	Screen earth for internal microphone -R74- in the microphone unit in front roof module -R164-
10	Engine control unit -J623- / Power unit mounting control unit -J931- ¹⁾	10	Front left loudspeaker -R2-	29	Internal microphone -R74- in the microphone unit in front roof module -R164-
11	Terminal 31, to (397) earth connection 32 in main wiring harness ¹⁾	11	Front right bass loudspeaker -R23-	30	Internal microphone -R74- in the microphone unit in front roof module -R164-
12		12	Front right bass loudspeaker -R23-	31	Centre loudspeaker -R208-
13	Noise cancellation microphone 2 -R286- ¹⁾	13	Rear left bass loudspeaker -R15- / Rear left treble loudspeaker -R14-	32	Centre loudspeaker -R208-
14	Noise cancellation microphone 2 -R286- ¹⁾	14	Rear left bass loudspeaker -R15- / Rear left treble loudspeaker -R14-	33	Left effect loudspeaker -R209-
15		15	Rear right bass loudspeaker -R17- Rear right treble loudspeaker -R16-	34	Left effect loudspeaker -R209-
16	Noise cancellation microphone 1 -R285- ¹⁾	16	Front left bass loudspeaker -R21-	35	
17	Noise cancellation microphone 1 -R285- ¹⁾	17	Subwoofer -R211-	36	
18		18		37	Right effect loudspeaker -R210-
		19	Front left mid-range loudspeaker -R103-	38	Right effect loudspeaker -R210-

¹⁾ Only models with noise compensation ANC (EP1)

[Back to overview](#) → [page 1](#) .

Connector assignment digital sound package control unit -J525- , MMI Navigation plus (I8H)

-T18l- (B)	Designation	-T38- (A)	Designation	-T38- (A)	Designation
1		1	Terminal 30, from fuse carrier 4 -ST4- in fuse holder F -SF-	20	Rear right bass loudspeaker -R17- Rear right treble loudspeaker -R16-
2		2	Terminal 31, to (50) earth point on left in luggage compartment	21	Left effect loudspeaker -R209-
3		3		22	Right effect loudspeaker -R210-
4		4	Subwoofer -R211-	23	
5		5		24	
6	Noise cancellation microphone 3 -R287- ¹⁾	6		25	Ring break diagnostic cable to (B444) connection 1 (diagnosis) in main wiring harness
7	Noise cancellation microphone 3 -R287- ¹⁾	7	Rear left bass loudspeaker -R15- / Rear left treble loudspeaker -R14-	26	Front right mid-range loudspeaker -R104-
8	Noise cancellation microphone 1 -R285- ¹⁾	8	Rear right bass loudspeaker -R17- Rear right treble loudspeaker -R16-	27	Front right mid-range loudspeaker -R104-
9	Noise cancellation microphone 1 -R285- ¹⁾	9	Left effect loudspeaker -R209-	28	Screen earth for internal microphone -R74- in the microphone unit in front roof module -R164-
10	Engine control unit -J623- / Power unit mounting control unit -J931- ¹⁾	10	Right effect loudspeaker -R210-	29	Internal microphone -R74- in the microphone unit in front roof module -R164-
11	Terminal 31, to (397) earth connection 32 in main wiring harness ¹⁾	11	Front left bass loudspeaker -R21-	30	Internal microphone -R74- in the microphone unit in front roof module -R164-
12		12	Front left bass loudspeaker -R21-	31	Centre loudspeaker -R208-
13	Noise cancellation microphone 4 -R288- ¹⁾	13	Front right bass loudspeaker -R23-	32	Centre loudspeaker -R208-
14	Noise cancellation microphone 4 -R288- ¹⁾	14	Front right bass loudspeaker -R23-	33	Front right loudspeaker -R3-
15		15		34	Front right loudspeaker -R3-
16	Noise cancellation microphone 2 -R286- ¹⁾	16	Subwoofer -R211-	35	Front left loudspeaker -R2-
17	Noise cancellation microphone 2 -R286- ¹⁾	17		36	Front left loudspeaker -R2-
18		18		37	Front left mid-range loudspeaker -R103-
		19	Rear left bass loudspeaker -R15- / Rear left treble loudspeaker -R14-	38	Front left mid-range loudspeaker -R103-

¹⁾ Only models with noise compensation ANC (EP1)

Back to overview [⇒ page 1](#) .

1.35 Fitting location digital sound package control unit -J525- , Bang & Olufsen Advanced Sound System (8RF), from model year 2015

Fitting location

In luggage compartment on left, behind side trim -1-.


1 - Digital sound package control unit -J525-

A - 38-pin connector -T38- , black

B - 2-pin connector -T2ca- , MOST bus, black

C - 32-pin connector -T32e- , black

Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG with respect to the correctness of information.

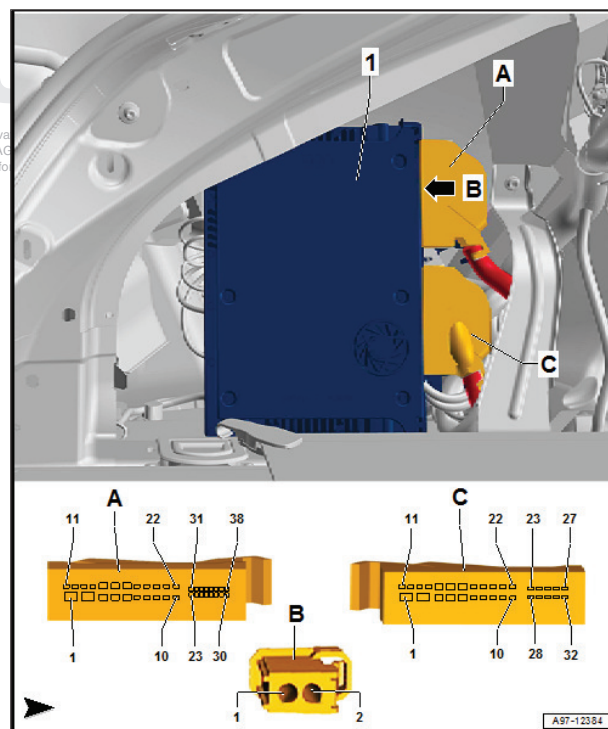

Connector assignment, digital sound package control unit -J525-

-T32e- (C)	Designation	-T38- (A)	Designation
1		1	Terminal 30, from fuse carrier 1 (30) -S204- in fuse holder F -SF-
2		2	Terminal 31, to (50) earth point on left in luggage compartment
3		3	Subwoofer -R211-
4		4	Front left bass loudspeaker -R21-
5	Front left mid-range loudspeaker -R103-	5	Front right bass loudspeaker -R23-
6	Front right mid-range loudspeaker -R104-	6	Rear left bass loudspeaker -R15-
7	Rear left treble loudspeaker -R14-	7	Rear right bass loudspeaker -R17-
8	Rear right treble loudspeaker -R16-	8	Control motor for front left treble speaker -V344-
9	Left effect loudspeaker -R209-	9	Control motor for front left treble speaker -V344-
10	Centre loudspeaker -R208-	10	Control motor for front left treble speaker -V344-
11		11	
12		12	
13	Ring break diagnostic cable to (B444) connection 1 (diagnosis) in main wiring harness	13	
14		14	Engine control unit -J623- / Power unit mounting control unit -J931- ¹⁾
15		15	Subwoofer -R211-
16	Terminal 31, to (397) earth connection 32 in main wiring harness ¹⁾	16	Front left bass loudspeaker -R21-
17	Front left mid-range loudspeaker -R103-	17	Front right bass loudspeaker -R23-
18	Front right mid-range loudspeaker -R104-	18	Rear left bass loudspeaker -R15-
19	Rear left treble loudspeaker -R14-	19	Rear right bass loudspeaker -R17-
20	Rear right treble loudspeaker -R16-	20	Control motor for front right treble speaker -V345-
21	Left effect loudspeaker -R209-	21	Control motor for front right treble speaker -V345-
22	Centre loudspeaker -R208-	22	Control motor for front right treble speaker -V345-
23	Right effect loudspeaker -R210-	23	Internal microphone -R74- in the microphone unit in front roof module -R164-
24		24	Noise cancellation microphone 1 -R285- ¹⁾
25	Centre loudspeaker 2 -R219-	25	Noise cancellation microphone 2 -R286- ¹⁾
26	Front left treble loudspeaker -R20-	26	Noise cancellation microphone 3 -R287- ¹⁾
27	Front right treble loudspeaker -R22-	27	Noise cancellation microphone 4 -R288- ¹⁾
28	Right effect loudspeaker -R210-	28	
29		29	
30	Centre loudspeaker 2 -R219-	30	

-T32e- (C)	Designation	-T38- (A)	Designation
31	Front left treble loudspeaker -R20-	31	Internal microphone -R74- in the microphone unit in front roof module -R164-
32	Front right treble loudspeaker -R22-	32	Noise cancellation microphone 1 -R285- ¹⁾
		33	Noise cancellation microphone 2 -R286- ¹⁾
		34	Noise cancellation microphone 3 -R287- ¹⁾
		35	Noise cancellation microphone 4 -R288- ¹⁾
		36	
		37	
		38	

¹⁾ Only models with noise compensation ANC (EP1)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Back to overview ⇒ [page 1](#) .

1.36 Fitting location Reversing camera system control unit -J772-

⇒ ["1.36.1 Fitting location reversing camera system control unit J772 , up to model year 2014", page 51](#)

⇒ ["1.36.2 Fitting location reversing camera system control unit J772 , model year 2015", page 53](#)

⇒ ["1.36.3 Fitting location reversing camera system control unit J772 , from model year 2016", page 55](#)

1.36.1 Fitting location, reversing camera system control unit -J772- , up to model year 2014