



Audi A4 Cabriolet Audi S4 Cabriolet

Quick reference guide



Dear Audi Driver,

This quick reference guide gives you a brief introduction to the main features and controls of your vehicle.

However, it cannot replace the Owner's Manual which contains important information and safety warnings.

We wish you safe and enjoyable motoring with your Audi.

AUDI AG



Locking and unlocking the vehicle

The central locking system locks and unlocks all the doors, the boot lid and the tank flap. It can be operated with the remote control or by turning the key in the lock.



Remote control keys

Press the appropriate button for about 1 second.

- 1 Unlocking button:** Open one of the doors within about 60 seconds, otherwise the vehicle will lock itself again automatically.
- 2 Unlocking button for boot lid:** Press the button for at least 1 second.
- 3 Locking button:** The turn signals flash once to confirm that the doors and boot lid are properly closed and locked.
- 4 Folding out the master key:** Press the release button.
Folding in the master key: Press the button and fold in the key.

Variable soft top storage box

The storage box can be raised in order to extend the luggage compartment.

To raise the storage box: Slide the operating lever to position A.

To lower the storage box: Slide the operating lever to position B.

Note: The lever for raising/lowering the variable soft top storage box can only be operated when the soft top is closed.

Convenience features

Opening windows with remote control key: To open the windows first press button 1 and then turn the key to the right in the driver's door lock and hold it in this position (applies to RHD vehicles).

Closing windows with remote control key: Turn the key to the left in the driver's door lock and hold it in this position (applies to RHD vehicles).

Opening/closing soft top with remote control key: To open, press button 1 and briefly turn the key to the right in the driver's door lock. Then, within 2 seconds, turn the key to the right again and hold it in this position (RHD vehicles). To close, briefly turn the key to the left in the driver's door lock. Then, within 2 seconds, turn the key to the left again and hold it in this position (RHD vehicles).

Anti-theft alarm

The alarm system is automatically **set** when you lock the car, and **switched off** when you unlock the car with the remote control. If you unlock the vehicle by inserting the key in the driver's door, the ignition must be switched on within 15 seconds, otherwise the alarm will be triggered.

WARNING!

The doors and windows cannot be opened from inside the vehicle if it has been locked from the outside.



▲ Locking and unlocking the vehicle · Variable soft top storage box

Safety

Seat belts must be worn on every journey, even on short trips in town. This applies to the front and rear seats. To ensure that the seat belts, belt tensioners and airbags are fully effective, please note the following points:

Wear the seat belt correctly

Make sure that the shoulder section of the belt is positioned over the centre of the shoulder and move the lap section as far down over the hips as possible. The belts should always be worn so that they fit tightly (see illustration).



Adjust seat and sit in correct position

The front seats should not be positioned too close to the steering wheel or dashboard. Maintain a distance of at least 25 cm and sit in a normal upright position. The top of the head restraint should be at eye level or higher. Always keep your feet in the footwell.

Safety of children in the vehicle

Children under 12 should travel on the rear seat. They must be protected by a child restraint system which complies with the European standard ECE-R 44 and is suitable for the child's height and weight. The safest place for the child restraint system is behind the front passenger's seat.

Roll-over bars

The roll-over bars provide a further safety system for all vehicle occupants, in addition to the seat belts and airbags. The roll-over bars are located behind the head restraints for the rear seats. Never store or secure any objects in the area behind the rear head restraints.

Adjusting front seats

Manual adjustment

1 Adjusting head restraints

Raising head restraint: Take hold of the sides of the head restraint with both hands and move it up as required.

Lowering head restraint: Press the button on the side of the head restraint and move the head restraint as required.

2 Unlocking the backrest

Lift the lever and fold the backrest down/return it to its upright position.

3 Adjusting angle of backrest

Lean forwards and turn adjuster wheel.

4 Adjusting lumbar support

Press appropriate part of the switch.

5 Adjusting seat height

Lift or press the lever repeatedly until the seat reaches the desired height.

6 Adjusting seat angle


Lift or press the lever repeatedly until the seat reaches the desired height.

7 Adjusting seat cushion

Lift the button and move the seat cushion.

8 Moving seat backwards or forwards

Lift the lever and move the seat into the desired position. Then release the lever and move the seat further until the catch engages.

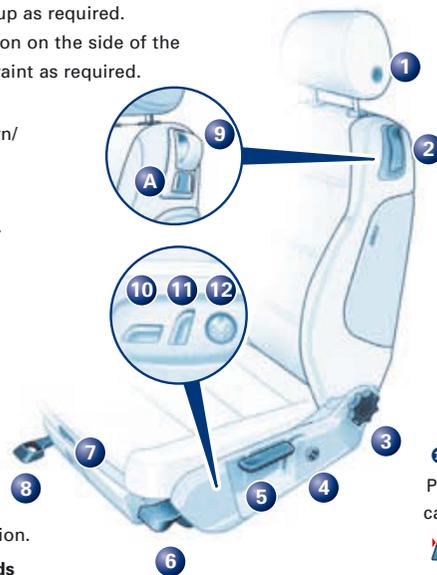

⚠ WARNING!

Please follow the instructions in the Owner's Manual supplied with your Audi and read the instructions provided by the child seat manufacturer.

Electrical adjustment

9 Folding the backrest down/returning it to its upright position

Lift the lever and fold the backrest down/return it to its upright position. Press front/back end of switch A to move the seat forwards/backwards.

10 Adjusting seat height and moving seat backwards or forwards

Press the switch in the direction indicated by the arrows:

- To raise/lower the seat at the front
- To raise/lower the seat at the rear
- To raise/lower the seat
- To move the seat forwards/backwards

11 Adjusting backrest

Press the switch in the direction indicated by the arrows:

- Backrest further upright/
- further reclined

12 Adjusting lumbar support

Press the appropriate part of the switch.

Instruments



❶ **Coolant temperature gauge**

❷ **Rev counter**

❸ **Warning and indicator lamps**

❹ **Speedometer**

❺ **Fuel gauge**

❻ **Reset button for trip recorder**

Press the button until the display is reset to zero.

❼ **Button for service indicator**

Press the button briefly when the vehicle is stationary and the ignition is switched on. A service reminder appears briefly if a service inspection is due in the near future.

❽ **Check button for:**

- **Activating mileage recorder display and clock**

Press button with ignition switched off.

- **Calling up driver messages again**

Press button briefly when warning symbol appears.

- **Setting speed warning 1**

Press button briefly when desired speed is reached.
To cancel: press button for at least 1 second while vehicle is moving.

❾ **Display for:**

- Driver messages (soft top etc.)
- Warning symbols and auto-check control
- Radio, CD and telephone
- Navigation system
- Outside temperature
- On-board computer (with two memories)
- Selector lever position
- Service indicator

❿ **Adjuster buttons for:**

- **Instrument lighting**

To adjust, press button **+** or **-**.

- **Digital clock and date**

Press the **MODE** button until the desired display (e.g. hour) starts to flash. To adjust, press button **+** or **-**.



Filling the tank

Opening the tank flap

Open the tank flap by pressing it in the direction indicated by the arrow. Unscrew the tank cap and hook it onto the flap (see illustration).

Fuel grade

The correct fuel grade for your vehicle is shown on the inside of the tank flap.

Note: The sticker listing the tyre pressures is located on the front passenger's door pillar.



© 2007 AUDI AG
AUDI AG reserves the right to alter any part of the vehicle, its equipment and technical specifications. No legal commitment can be implied by the information, illustrations or descriptions in this publication. No part of this publication may be reprinted, reproduced or translated without the written permission of AUDI AG. All rights under the laws of copyright are expressly reserved by AUDI AG. Subject to alteration and amendment. Printed in Germany. Concept and layout: Pfiemer GmbH.

Warning and indicator lamps

	Emission control system ¹⁾		Turn signals, hazard warning lights
	Airbag system ¹⁾		Electronic Stability Program (ESP)
	Cruise control system		Alternator ¹⁾
	Trailer turn signals		Main beam headlights
	Anti-lock brake system ¹⁾		Engine management ¹⁾ or EPC
	Seat belt warning lamp		Glow plugs ¹⁾ (on diesel models)
	Soft top operation		Fault in brake system or handbrake engaged

¹⁾ Should one of these warning symbols or warning lamps light up when driving, please contact a qualified workshop without delay.

Warning symbols and auto-check control

Any faults which may occur are indicated by red or yellow symbols in the instrument cluster display.


⚠ WARNING!
If one of the red symbols lights up while you are driving, stop the car, switch off the engine and refer to the Owner's Manual.

	Fault in brake system		Engine oil pressure too low
	Fault in cooling system		Tyre pressure too low

The yellow symbols are not explained in this Quick reference guide, as some symbols are automatically accompanied by a corresponding message, which is shown in the display for about 5 seconds. Please refer to the Owner's Manual for an explanation of the symbols for which no message appears in the display.

Note: If required, you can call up a message again by briefly pressing the **CHECK** button.

Instruments and controls

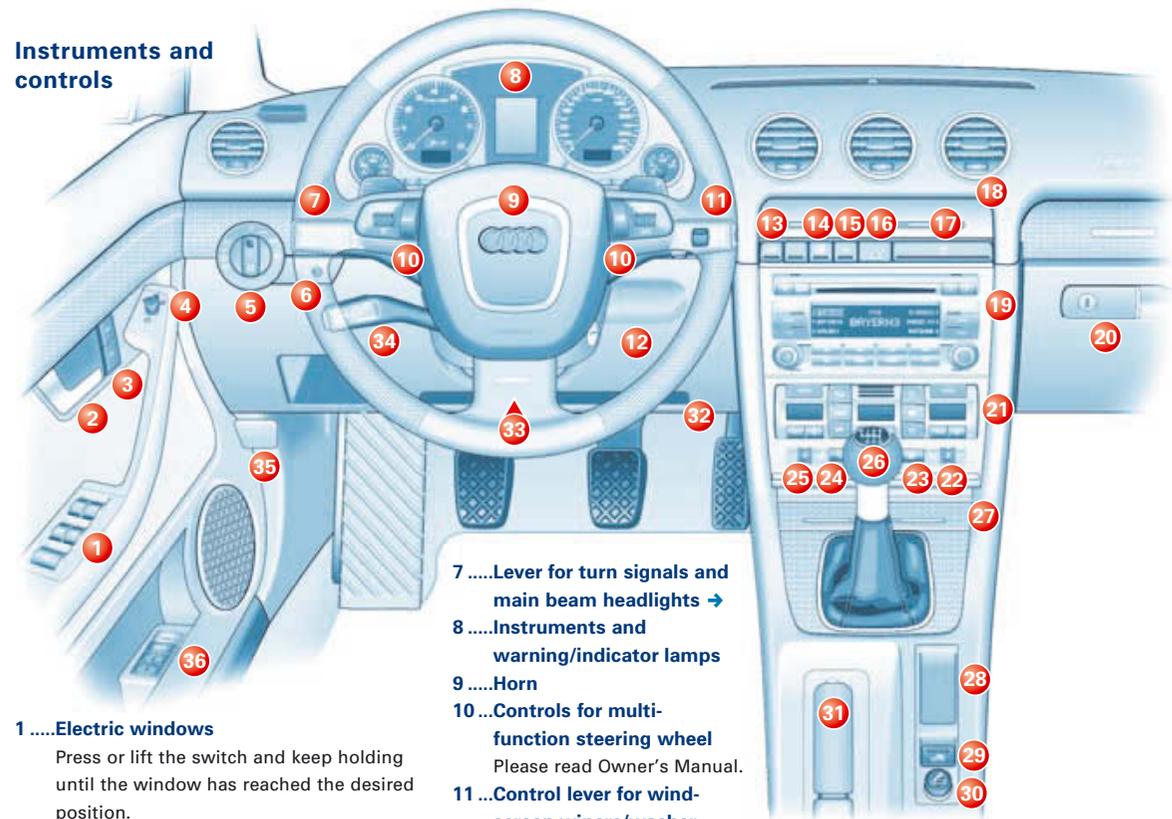

1Electric windows

Press or lift the switch and keep holding until the window has reached the desired position.

2Door handle

3Central locking switch

Press the appropriate symbol to unlock or lock the vehicle from the inside:

- To unlock
- To lock

4Electric adjuster for exterior mirrors

Turn the adjuster to the position for the left or right exterior mirror. Press the adjuster to move the mirror surface in the desired direction.

Note: At low outside temperatures, the mirrors are heated automatically when the rear window heating is switched on.

5Light switch →

6Headlight range control and coming home/leaving home switch/switch for daytime running lights

7Lever for turn signals and main beam headlights →

8Instruments and warning/indicator lamps

9Horn

10 ...Controls for multi-function steering wheel

Please read Owner's Manual.

11 ...Control lever for windscreen wipers/washer and on-board computer →

12 ...Ignition lock

13 ...Switch for Electronic Stabilisation Program (ESP)

14 ...PASSENGER AIRBAG OFF display

15 ...Switch for acoustic parking system

16 ...Switch for hazard warning lights

17 ...Cup holder

18 ...Compartment for (sun)glasses

19 ...Sound system or navigation system

20 ...Glove box

21 ...Switches for air conditioner →

22 ...Thumbwheel for seat heating (front right seat)

23 ...Switch for rear window heating

24 ...Switch for windscreen heating

25 ...Thumbwheel for seat heating (front left seat)

26 ...Gear lever/selector lever (on vehicles with automatic gearbox) →

27 ...Ashtray

28 ...Storage compartment

29 ...Soft top control switch →

30 ...Cigarette lighter/socket

31 ...Handbrake

32 ...Service Wallet compartment

33 ...Lever for adjustable steering column →

34 ...Control lever for cruise control system

Please refer to the Owner's Manual for operating instructions.

35 ...Bonnet release lever


Please read Owner's Manual.

36 ...Memory buttons for driver's seat

Please read Owner's Manual.

▲ Warning and indicator lamps ▼ Instruments and controls · Windbreak

→ Further information for these items is given on the following pages.

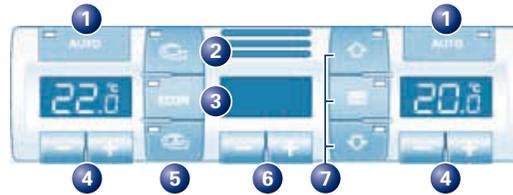

[21] Switches for air conditioner

- 1 **Automatic mode** (set the desired temperature for the driver and passenger and press the corresponding button)
- 2 **Air recirculation** (circulates and filters the air in the interior of the vehicle)
- 3 **ECON mode** (deactivates air cooling)
- 4 **Temperature selection** (driver's side/front passenger's side)
- 5 **Automatic air recirculation**
- 6 **Blower speed**
- 7 **Air flow settings**


Note: The air conditioner settings are stored and assigned to the remote control key, taking into account whether the soft top is open or closed. When the vehicle is started again the stored settings will automatically be recalled.



[33] Lever for adjustable steering column

Push lever down and adjust position of the steering column as required. Then push the lever back up.

[5] Light switch

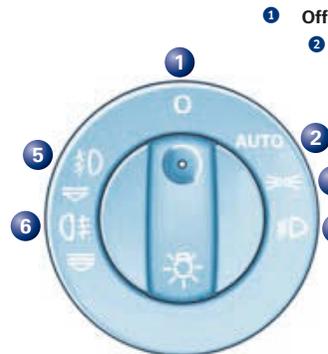

- 1 **Off**
- 2 **AUTO**
When the light switch is set to AUTO, the dipped beam headlights will be switched on and off automatically according to the outside light conditions (only on vehicles with a light sensor).
- 3 **Side lights**
- 4 **Dipped beam/main beam headlights**
In fog, turn switch to dipped headlights position and then pull out to 1st stop (5 **front fog lights**) or to 2nd stop (6 **front and rear fog lights**).

[7] Lever for turn signals and main beam headlights

- 1 Right turn signals (with ignition off: right parking light on)
- 2 Left turn signals (with ignition off: left parking light on)
- 3 Main beam headlights
- 4 Headlight flasher



[11] Control lever for windscreen wipers/washer and on-board computer

- 0 Wipers off
- 1 Brief wipe
- 2 Intermittent wipe: Move control A to alter the wiper delay intervals.
- 3 Slow wiper speed
- 4 Fast wiper speed
- 5 Automatic wash and wipe: Pull lever towards you and hold.

Controls for on-board computer

Press the top or bottom of rocker switch B repeatedly to display the various computer functions in turn. Press and hold RESET button C to return the current display to zero.

[29] Soft top control switch

Opening the soft top

Pull up and hold the switch until the soft top is fully open.

Closing the soft top

Press and hold the switch until the soft top is completely closed.

Notes: If the control switch is released during the opening/closing operation, the soft top will stop moving. The soft top is completely open/closed when the warning lamp in the instrument cluster goes out. The soft top can only be opened or closed when the ignition is switched on. For information on how to open/close the soft top manually please refer to the Owner's Manual.



RESET/selector button

Press the RESET button C repeatedly to switch between the information supplied by the on-board computer, the navigation system and the menu display. Use rocker switch B to highlight a menu function (e.g. tyre pressure). Then activate the function by pressing the RESET button C.

[26] Selector lever for automatic gearbox

Selector lever positions

- | | |
|-----------------------|-----------------------|
| P Parking lock | R Reverse gear |
| N Neutral | D Drive |
| S Sport | |



To move the selector lever out of position P or N, or into position P or R, press the interlock button on the selector lever handle and the brake pedal simultaneously.

Note: Use the foot brake to hold the vehicle when stationary with the engine running (in all selector lever positions other than P).

⚠ WARNING!
Do not move the selector lever to positions P or R when the vehicle is moving.


Manual gear selection (tiptronic)

The tiptronic program enables you to change gear manually. Move the selector lever out of position D into the tiptronic gate on the right. Press the selector lever forwards briefly to shift up a gear, or push the lever back to shift down a gear.

Windbreak

Installing:

Take the windbreak out of the bag (in luggage compartment) and fold the two side sections outwards.

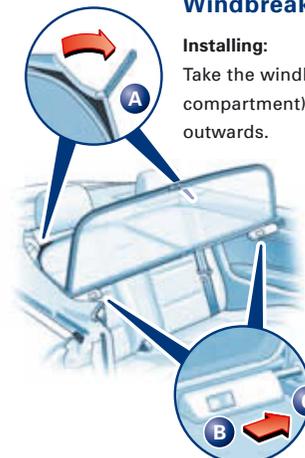

Pull out the two retainer pegs A and hold the windbreak in a horizontal position against the backrest upholstery. Slide the two retainer pegs A all the way into the mountings.

Press the release catches B (on left and right) and slide the locking pins into the mounting holes C at the sides.

Fold up the vertical section of the windbreak so that it engages in the upright position.

Removing:

Proceed in the reverse sequence of the installation described above.