



Audi TT Coupé

Quick reference guide


Dear Audi Driver,

The aim of this quick reference guide is to introduce you to the main features and controls of your vehicle.

This quick reference guide cannot replace the information contained in the Owner's Manual; it is therefore important that you also read the notes and warnings in the Owner's Manual.

We wish you safe and enjoyable motoring with your new Audi.

AUDI AG

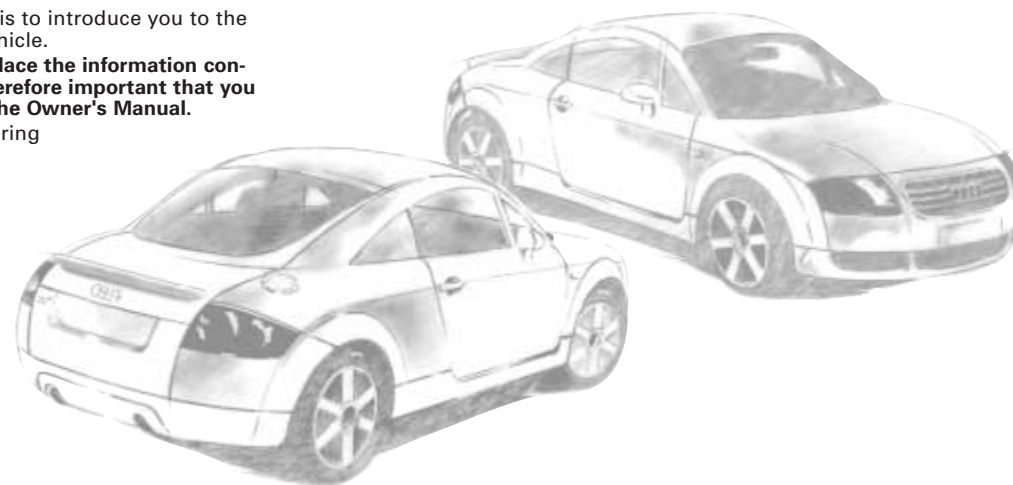

Locking and unlocking the vehicle

The central locking system locks and unlocks the doors. It can be operated with the remote control or by turning the key in the lock.

Operating the radio-activated remote control

Press the appropriate button for about 1 second.

1 Unlocking button

Open one of the doors or the boot lid within about 60 seconds, otherwise the vehicle will lock itself again automatically.

2 Unlocking button for boot lid

Press the button for at least 1 second.

3 Locking button

The turn signals will flash briefly when the car is locked to confirm that doors and boot lid are closed properly.


4 Folding out the master key

Press the release button.

Folding away the master key

Press the button and fold the key away.

Note: Press and hold unlocking button of remote control (or turn and hold key in lock) to open all the windows. Press and hold locking button of remote control (or turn and hold key in lock) to close all the windows.

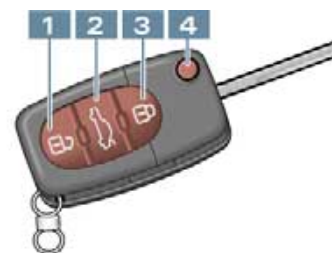

Warning: The doors and windows cannot be opened from inside the vehicle if it has been locked from the outside.

Anti-theft alarm

The alarm system is automatically **set** when the car is locked. The alarm system is **switched off** automatically when you unlock the vehicle with the remote control.

Note: If you unlock the vehicle by inserting the key in the driver's door, the ignition must be switched on within 15 seconds, otherwise the alarm will be triggered.

Adjusting front seats

1 Adjusting head restraints

Move the head restraint up or down.

2 Tipping backrest forwards

Lift the handle and tip the backrest forwards.

3 Adjusting angle of backrest


Lean forwards and turn adjuster wheel.

4 Adjusting seat height

Pull the lever up to raise the seat; press it down to lower the seat.

5 Moving seat backwards or forwards

Lift the handle and move the seat.

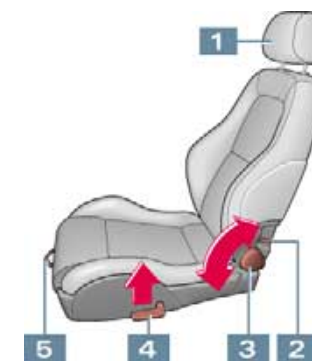

Rear seat

The backrest of the rear seat is split into two sections which can be folded down individually.

Folding backrest down

Pull handle in direction indicated and tip backrest forwards.

Returning backrest to upright position

Push backrest up until it engages securely.



Safety

Seat belts must be worn on every journey, even on short trips in urban traffic. **The rear seat must not be used by passengers over 1.50 metres tall.** To ensure that the seat belts, belt tensioners and airbags are fully effective, note the following points:



Adjust seat and sit in correct position

The front seats should not be positioned too close to the steering wheel or dashboard. Maintain a distance of at least 25 cm from the steering wheel. It is important to sit in a normal, upright position and set the backrest so it is fully against your back. The top of the head restraint should be at eye level (or higher). Put your feet in a comfortable position in the footwell.

Wear the seat belt correctly

Make sure that the shoulder section of the belt is positioned over the centre of the shoulder, and move the lap section as far down over the hips as possible. The belts should always be worn so that they fit tightly (see illustration).

Safety of children in the vehicle



Children under 12 years of age should travel on the rear seat. They must be protected by a child restraint system which complies with European standard ECE R 44, and which is the correct size for the child's weight and height. The safest place for the child restraint system is behind the front passenger's seat. The retractor mechanism of the seat belts can be locked to secure a child safety seat.

Please observe the notes in the Audi Owner's Manual and refer to the manufacturer's instructions for the child seat.

Category 0 oder 0+: For babies up to about 9 months/10 kg and infants up to about 18 months/13 kg.

Category 1: For small children up to about 4 years of age/18 kg.

Category 2: For children up to about 7 years/25 kg.

Category 3: Children who are over 7 years of age and between 1.30 m and 1.50 m tall should travel on the rear seat, which has been approved as a Category 3 child seat. The child should wear a seat belt and sit directly on the seat - do not use booster cushions.

Instruments and warning/indicator lamps



1 Rev counter

2 Warning and indicator lamps

EPC Engine management¹⁾

Side lights/headlights

Electronic stabilisation programme (ESP)

Electronic immobilizer

Main beam headlights

Turn signals, hazard warning lights

Fault in engine management system¹⁾

AIR BAG Airbag system¹⁾

Anti-lock brake system (ABS)¹⁾

Handbrake engaged

Alternator¹⁾

Seat belt warning

3 Coolant temperature gauge

4 Fuel gauge

5 Speedometer

6 Mileage recorder

Top display/bottom display:
trip recorder/total mileage

7 Reset button for trip recorder

8 Display:

- Warning symbols and auto-check control**

OK No faults

Fault in brake system

Coolant temperature too high/coolant level too low

Engine oil pressure too low

If one of the red symbols lights up while you are driving, stop the car, switch off the engine and refer to the Owner's Manual.

BREMS LICHT / Brake light faulty¹⁾

Bulb failure¹⁾

Brake pads worn¹⁾

Washer fluid level low

Fuel level low

Battery voltage too high or too low¹⁾

Check engine oil level

Engine oil sensor faulty¹⁾

Speed warning 1 or 2 (km/h or mph)

Dynamic headlight range control faulty¹⁾

Door/boot lid not shut

¹⁾ Should one of these warning symbols light up while driving, please contact a specialist workshop as soon as possible.

On-board computer

Instantaneous fuel consumption

Fuel range

Driving time

average fuel consumption

average speed

Outside temperature

Selector lever position (on vehicles with automatic gearbox)

Radio/telephone information

Navigation information

Service indicator

Shortly before a service is due, the display will briefly show the word **Service**, together with the number of miles/km until the service is due.

Adjuster button for:

- To set the time/date**
Keep pulling the button briefly until the desired display appears. Turn the button to alter the time/date.

To check distance to next service

Press the button briefly with the ignition on and the vehicle stationary.

To call up auto-check control displays (in turn)

Press the button twice with the ignition on.

To call up driver information

Press the button when one of the red symbols flashes.

To activate mileage recorder display and digital clock

Press the button when the ignition is off.

To set speed warning 1

Press the button briefly when the desired speed is indicated on the speedometer. To clear the speed limit, press the button for at least 1 second while the vehicle is moving.

Digital clock/date display

Filling the tank



Releasing the tank flap


Press the switch (with the filler pump symbol) in the centre console to open the tank flap. Then unscrew the tank cap and hook it onto the flap (see illustration).

Stickers for:

- Fuel grade**
- Tyre pressures**

© 2002 AUDI AG

AUDI AG reserves the right to alter any part of the vehicle, its equipment and technical specifications. No legal commitment can be implied by the information, illustrations or descriptions in this publication. No part of this publication may be reprinted, reproduced or translated without the written permission of AUDI AG. All rights under the laws of copyright are expressly reserved by AUDI AG. Subject to change. Printed in Germany. Concept and layout: Pfiemer Kataloge GmbH.

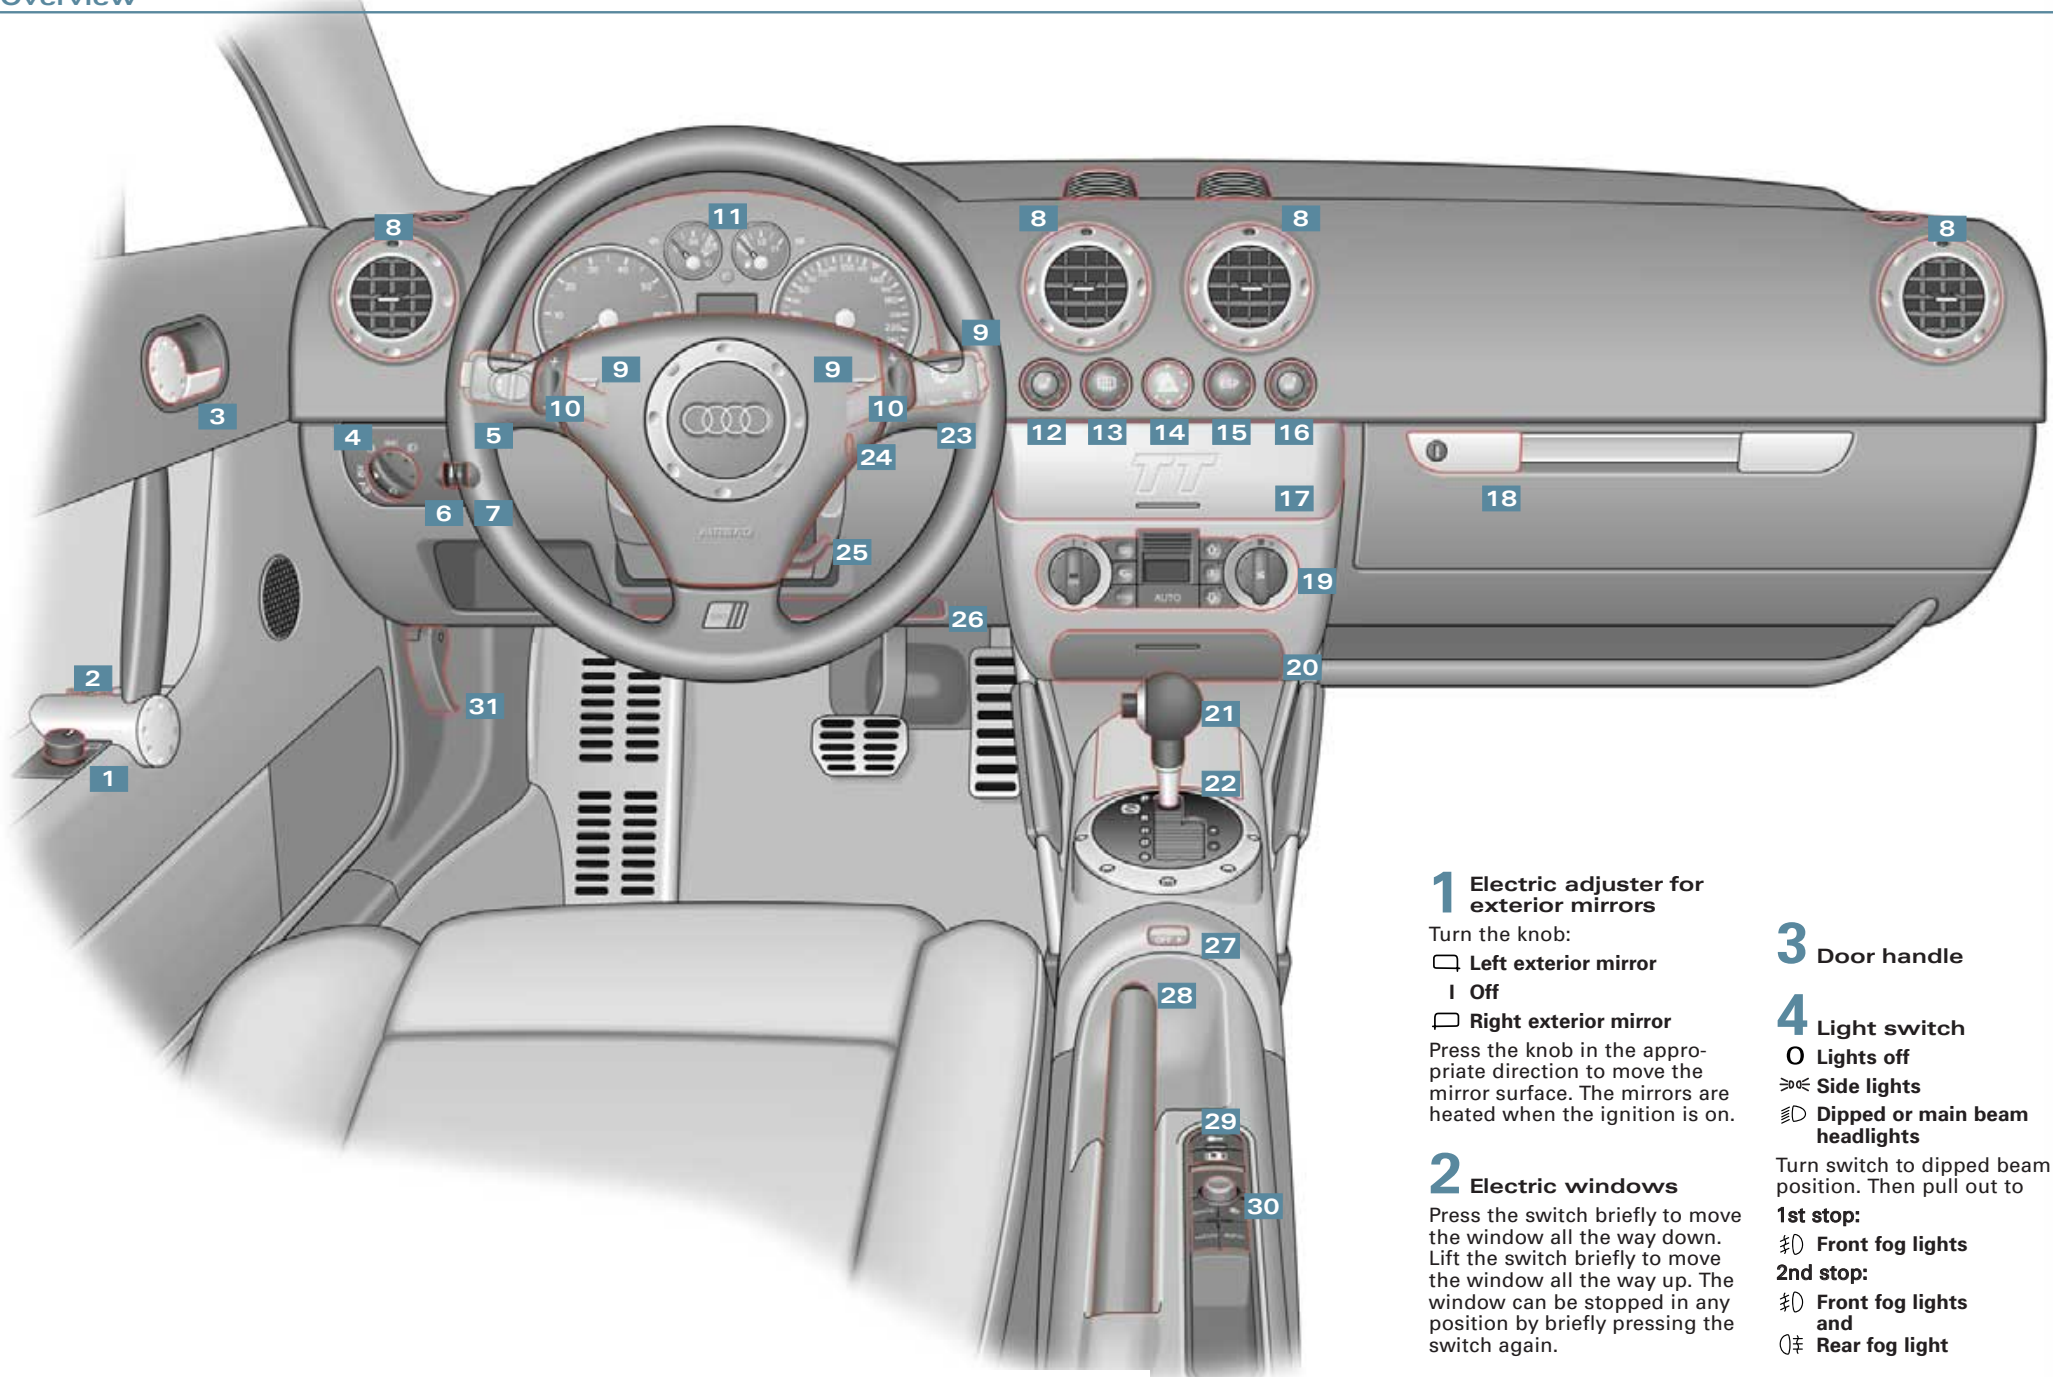

1 Electric adjuster for exterior mirrors

Turn the knob:

☐ Left exterior mirror

| Off

☐ Right exterior mirror

Press the knob in the appropriate direction to move the mirror surface. The mirrors are heated when the ignition is on.

2 Electric windows

Press the switch briefly to move the window all the way down. Lift the switch briefly to move the window all the way up. The window can be stopped in any position by briefly pressing the switch again.

3 Door handle

4 Light switch

○ Lights off

☞ Side lights

☞ Dipped or main beam headlights

Turn switch to dipped beam position. Then pull out to

1st stop:

☞ Front fog lights

2nd stop:

☞ Front fog lights and

☞ Rear fog light

5 Light switch; turn signal and headlight dip lever



1 Right turn signals
(With ignition off: right parking light on)

2 Left turn signals
(With ignition off: left parking light on)

3 Main beam headlights

4 Headlight flasher
Cruise control system

To activate the system: slide control **A** to ON/EIN position. Press button **B** to store the current speed and maintain this speed constantly.

To switch off cruise control temporarily: press either the brake pedal or clutch pedal, or slide control **A** to OFF/AUS. To resume the programmed cruising speed, slide switch **A** to RES/AUFN.

To switch off cruise control completely: slide control **A** all the way over to OFF/AUS until the click stop engages.

6 Thumbwheel for instrument lighting

7 Thumbwheel for headlight range control

Press the knob lightly and turn to the required setting:

- 0** Front seats occupied
- I** All seats occupied
- II** All seats occupied, luggage compartment loaded
- III** Driver only, luggage compartment loaded

8 Air outlets

9 Horn

10 Tiptronic controls on steering wheel for manual gear selection

When the selector lever is in position **D** or **S**, or in the manual shift programme, you can shift up or down to the next gear by briefly pressing the upper or lower part of either of the switches.

11 Instruments and warning/indicator lamps

See also overleaf.

12 Seat heating (front left seat)

Press the knob to switch on. Turn the knob to adjust the temperature.

13 Rear window heating

14 Hazard warning lights

15 Switch for ESP (electronic stabilisation programme)

16 Seat heating (front right seat)

Press the knob to switch on. Turn the knob to adjust the temperature.

17 Radio cover panel

To open: lightly press lower edge.

18 Lockable glove box

19 Air conditioner controls

- f + On/off control, temperature setting
Press control to switch on; pull control to switch off.

Defrost windows
AUTO Automatic mode

- * + Blower speed

Standard setting for all seasons: Select a temperature of 22 °C and switch on automatic mode.

20 Ashtray with cigarette lighter/ electrical socket

21 Gear lever/selector lever

Selector lever positions on vehicles with automatic gearbox

- P** - Parking lock
- R** - Reverse gear
- N** - Neutral
- D** - Drive
- S** - Sport

To move the selector lever out of position **P** or **N**, or into position **P** or **R**, press the interlock button on the selector lever handle and the brake pedal simultaneously.

Note: Use the foot brake to hold the vehicle when stationary with the engine running (in all selector lever positions other than **P**).

Warning: Do not move the selector lever to positions **P** or **R** when the vehicle is moving.

Manual gear selection (Tiptronic)
The Tiptronic program enables you to change gear manually.


To do this, move the selector lever out of position **D** into the Tiptronic gate on the right. Press the selector lever forwards briefly to shift up a gear, or push the lever back to shift down a gear.

22 Switch compartment

Slide open lid for access to switches:

- Release switch for tank flap
- Release switch for tailgate
- Deactivator switch for interior monitor of alarm system

23 Windscreen wiper and washer lever

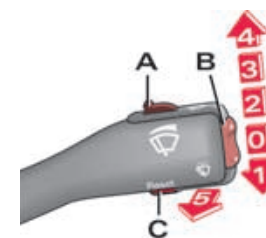

0 Off

1 Brief wipe

2 Intermittent wipe
Move control **A** to alter the wiper intervals.

3 Slow wiper speed

4 Fast wiper speed

5 Automatic wash and wipe
Pull lever towards you and hold.

Function selector switch for on-board computer

Press the top or bottom of rocker switch **B** repeatedly to call up the various displays. Press and hold button **C** to reset display to zero.

Function selector for display modes

Press button **C** repeatedly to select the following displays: on-board computer and navigation system, or to switch the display off.

24 Ignition lock

25 Lever for adjustable steering column



Pull lever down and adjust the position of the steering column as required. Then push it back up as far as it will go.

26 Compartment for Owner's Manual and Service Wallet

27 AIRBAG OFF indicator lamp

The indicator lamp lights up constantly if the front passenger's airbag has been switched off by turning the key in the switch located in the glove box.

28 Handbrake

29 Central locking switch

Press the appropriate symbol to lock or unlock the vehicle centrally from the inside:

- lock
- unlock

30 Controls for navigation system

Please refer to operating instructions.

31 Bonnet release lever

Please refer to Owner's Manual.