



2003 Maintenance Schedule

1.8L

	Kilometers		8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144	152	160	168
	Miles		5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105
Engine Oil – change	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Engine Filter – change	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Timing Belt – check									•									•					
Timing Belt – replace																							•
Timing Belt Tensioner – replace																							•
V-belt/Ribbed Belt – check									•									•					
V-belt – replace																		•					
Spark Plugs – replace									•									•					
Air Cleaner – replace filter									•									•					
W/W Fluid – check level		•		•		•		•		•		•		•		•		•		•		•	
Auto-Shift Lock – check operation		•		•		•		•		•		•		•		•		•		•		•	
Brake System – check damage/leaks, pad thickness, fluid level		•		•		•		•		•		•		•		•		•		•		•	
Wheels – rotate front to rear		•		•		•		•		•		•		•		•		•		•		•	
Airbag System – check function/damage*		•		•		•		•		•		•		•		•		•		•		•	
Battery – check electrolyte level		•		•		•		•		•		•		•		•		•		•		•	
Engine – check for leaks				•		•		•		•		•		•		•		•		•		•	
Pollen Filter – replace				•		•		•		•		•		•		•		•		•		•	
Cooling System – check level				•		•		•		•		•		•		•		•		•		•	
Transmission – check for leaks**				•		•		•		•		•		•		•		•		•		•	
Tires/Spare – check condition				•		•		•		•		•		•		•		•		•		•	
Driveshaft – check boots				•		•		•		•		•		•		•		•		•		•	
OBD – check DTC memory				•		•		•		•		•		•		•		•		•		•	
Door Hinge – lube				•		•		•		•		•		•		•		•		•		•	
Headlights – check and adjust if necessary				•		•		•		•		•		•		•		•		•		•	
Exhaust System – check for damage and leaks				•		•		•		•		•		•		•		•		•		•	
Sunroof Frame – clean and lubricate				•		•		•		•		•		•		•		•		•		•	
Road Test				•		•		•		•		•		•		•		•		•		•	
Power Steering – check fluid level									•									•					
Brake Fluid***									•									•					
Check ATF and Differential for leaks and level; add if necessary									•									•					
Front Axle – check dust seals, ball joints, tie rods									•									•					

*Airbag System – visual check every 12 months regardless of mileage **Manual Transmission – check level; add if necessary

***Brake Fluid – change every 2 years regardless of mileage

Soft top – check function and roll-over protection with cloth top open every 2 years or 20,000 miles (32,000 km), whichever comes first



2003 Maintenance Schedule 2.0L

	Kilometers		8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144	152	160	168
	Miles		5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105
Engine Oil – change	•	•		•		•		•		•		•		•		•		•		•		•	
Engine Filter – change	•	•		•		•		•		•		•		•		•		•		•		•	
Timing Belt – check										•									•				
V-belt/Ribbed Belt – check										•									•				
Spark Plugs – replace										•									•				
Air Cleaner – replace filter										•									•				
W/W Fluid – check level		•		•		•		•		•		•		•		•		•		•		•	
Auto-Shift Lock – check operation		•		•		•		•		•		•		•		•		•		•		•	
Brake System – check damage/ leaks, pad thickness, fluid level		•		•		•		•		•		•		•		•		•		•		•	
Wheels – rotate front to rear		•		•		•		•		•		•		•		•		•		•		•	
Airbag System – check function/ damage*		•		•		•		•		•		•		•		•		•		•		•	
Battery – check electrolyte level		•		•		•		•		•		•		•		•		•		•		•	
Engine – check for leaks				•		•		•		•		•		•		•		•		•		•	
Pollen Filter – replace				•		•		•		•		•		•		•		•		•		•	
Cooling System – check level				•		•		•		•		•		•		•		•		•		•	
Transmission – check for leaks**				•		•		•		•		•		•		•		•		•		•	
Tires/Spare – check condition				•		•		•		•		•		•		•		•		•		•	
Driveshaft – check boots				•		•		•		•		•		•		•		•		•		•	
OBD – check DTC memory				•		•		•		•		•		•		•		•		•		•	
Door Hinge – lube				•		•		•		•		•		•		•		•		•		•	
Headlights – check and adjust if necessary				•		•		•		•		•		•		•		•		•		•	
Exhaust System – check for damage and leaks				•		•		•		•		•		•		•		•		•		•	
Sunroof Frame – clean and lubricate				•		•		•		•		•		•		•		•		•		•	
Road Test				•		•		•		•		•		•		•		•		•		•	
Power Steering – check fluid level										•									•				
Brake Fluid***										•									•				
Check ATF and Differential for leaks and level; add if necessary										•									•				
Front Axle – check dust seals, ball joints, tie rods										•									•				

*Airbag System – visual check every 12 months regardless of mileage **Manual Transmission – check level; add if necessary

***Brake Fluid – change every 2 years regardless of mileage

Soft top – check function and roll-over protection with cloth top open every 2 years or 20,000 miles (32,000 km), whichever comes first



2003 Maintenance Schedule

1.9L TDI

	Kilometers		8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144	152	160	168
	Miles		5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105
Engine Oil – change	•	•		•		•		•		•		•		•		•		•		•		•	
Engine Filter – change	•	•		•		•		•		•		•		•		•		•		•		•	
Timing Belt – check		•		•		•		•		•		•		•		•		•		•		•	
Timing Belt – replace																							•
V-belt/Ribbed Belt – check										•								•					
Air Cleaner – replace filter										•								•					
Water Sep – drain (TDI)	•	•		•		•		•		•		•		•		•		•		•		•	
Fuel Filter – replace (TDI)				•						•				•				•					•
W/W Fluid – check level		•		•		•		•		•		•		•		•		•		•		•	
Auto-Shift Lock – check operation		•		•		•		•		•		•		•		•		•		•		•	
Brake System – check damage/leaks, pad thickness, fluid level		•		•		•		•		•		•		•		•		•		•		•	
Wheels – rotate front to rear		•		•		•		•		•		•		•		•		•		•		•	
Airbag System – check function/damage*		•		•		•		•		•		•		•		•		•		•		•	
Battery – check electrolyte level		•		•		•		•		•		•		•		•		•		•		•	
Engine – check for leaks				•						•				•				•					•
Pollen Filter – replace				•						•				•				•					•
Cooling System – check level				•						•				•				•					•
Transmission – check for leaks**				•						•				•				•					•
Tires/Spare – check condition				•						•				•				•					•
Driveshaft – check boots				•						•				•				•					•
OBD – check DTC memory				•						•				•				•					•
Door Hinge – lube				•						•				•				•					•
Headlights – check and adjust if necessary				•						•				•				•					•
Exhaust System – check for damage and leaks				•						•				•				•					•
Sunroof Frame – clean and lubricate				•						•				•				•					•
Road Test				•						•				•				•					•
Power Steering – check fluid level										•								•					
Brake Fluid***										•								•					
Check ATF and Differential for leaks and level; add if necessary										•								•					
Front Axle – check dust seals, ball joints, tie rods										•								•					

*Airbag System – visual check every 12 months regardless of mileage

**Manual Transmission – check level; add if necessary

***Brake Fluid – change every 2 years regardless of mileage



2003 Maintenance Schedule VR6

	Kilometers		8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144	152	160	168
	Miles		5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105
Engine Oil – change	•	•		•		•		•		•		•		•		•		•		•		•	
Engine Filter – change	•	•		•		•		•		•		•		•		•		•		•		•	
V-belt/Ribbed Belt – check										•								•					
Spark Plugs – replace										•								•					
Air Cleaner – replace filter										•								•					
W/W Fluid – check level		•		•		•		•		•		•		•		•		•		•		•	
Auto-Shift Lock – check operation		•		•		•		•		•		•		•		•		•		•		•	
Brake System – check damage/ leaks, pad thickness, fluid level		•		•		•		•		•		•		•		•		•		•		•	
Wheels – rotate front to rear		•		•		•		•		•		•		•		•		•		•		•	
Airbag System – check function/ damage*		•		•		•		•		•		•		•		•		•		•		•	
Battery – check electrolyte level		•		•		•		•		•		•		•		•		•		•		•	
Engine – check for leaks				•						•				•				•					•
Pollen Filter – replace				•						•				•				•					•
Cooling System – check level				•						•				•				•					•
Transmission – check for leaks**				•						•				•				•					•
Tires/Spare – check condition				•						•				•				•					•
Driveshaft – check boots				•						•				•				•					•
OBD – check DTC memory				•						•				•				•					•
Door Hinge – lube				•						•				•				•					•
Headlights – check and adjust if necessary				•						•				•				•					•
Exhaust System – check for damage and leaks				•						•				•				•					•
Sunroof Frame – clean and lubricate				•						•				•				•					•
Road Test				•						•				•				•					•
Power Steering – check fluid level										•								•					
Brake Fluid***										•								•					
Check ATF and Differential for leaks and level; add if necessary****										•								•					
Front Axle – check dust seals, ball joints, tie rods										•								•					

*Airbag System – visual check every 12 months regardless of mileage **Manual Transmission – check level; add if necessary
 Brake Fluid – change every 2 years regardless of mileage *Change ATF EuroVan only



2003 Maintenance Schedule

2.8L V6

	Kilometers		8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144	152	160	168
	Miles		5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105
Engine Oil – change	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Engine Filter – change	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Timing Belt – check									•									•					
Timing Belt – replace																							•
Timing Belt Tensioner – replace																							•
V-belt/Ribbed Belt – check									•									•					
Spark Plugs – replace									•									•					
Air Cleaner – replace filter									•									•					
W/W Fluid – check level		•		•		•		•		•		•		•		•		•		•		•	
Auto-Shift Lock – check operation		•		•		•		•		•		•		•		•		•		•		•	
Brake System – check damage/ leaks, pad thickness, fluid level		•		•		•		•		•		•		•		•		•		•		•	
Wheels – rotate front to rear		•		•		•		•		•		•		•		•		•		•		•	
Airbag System – check function/ damage*		•		•		•		•		•		•		•		•		•		•		•	
Battery – check electrolyte level		•		•		•		•		•		•		•		•		•		•		•	
Engine – check for leaks				•		•		•		•		•		•		•		•		•		•	
Pollen Filter – replace				•		•		•		•		•		•		•		•		•		•	
Cooling System – check level				•		•		•		•		•		•		•		•		•		•	
Transmission – check for leaks**				•		•		•		•		•		•		•		•		•		•	
Tires/Spare – check condition				•		•		•		•		•		•		•		•		•		•	
Driveshaft – check boots				•		•		•		•		•		•		•		•		•		•	
OBD – check DTC memory				•		•		•		•		•		•		•		•		•		•	
Door Hinge – lube				•		•		•		•		•		•		•		•		•		•	
Headlights – check and adjust if necessary				•		•		•		•		•		•		•		•		•		•	
Exhaust System – check for damage and leaks				•		•		•		•		•		•		•		•		•		•	
Sunroof Frame – clean and lubricate				•		•		•		•		•		•		•		•		•		•	
Road Test				•		•		•		•		•		•		•		•		•		•	
Power Steering – check fluid level									•									•					
Brake Fluid***									•									•					
Check ATF and Differential for leaks and level; add if necessary									•									•					
Front Axle – check dust seals, ball joints, tie rods									•									•					

*Airbag System – visual check every 12 months regardless of mileage

**Manual Transmission – check level; add if necessary

***Brake Fluid – change every 2 years regardless of mileage



2003 Maintenance Schedule

4.0L W8

	Kilometers		8	16	24	32	40	48	56	64	72	80	88	96	104	112	120	128	136	144	152	160	168	
	Miles		5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105	
Engine Oil – change	•	•		•		•		•		•		•		•		•		•		•		•		•
Engine Filter – change	•	•		•		•		•		•		•		•		•		•		•		•		•
V-belt/Ribbed Belt – check										•								•						
Spark Plugs – replace										•								•						
Air Cleaner – replace filter										•								•						
W/W Fluid – check level		•		•		•		•		•		•		•		•		•		•		•		•
Auto-Shift Lock – check operation		•		•		•		•		•		•		•		•		•		•		•		•
Brake System – check damage/leaks, pad thickness, fluid level		•		•		•		•		•		•		•		•		•		•		•		•
Wheels – rotate front to rear		•		•		•		•		•		•		•		•		•		•		•		•
Airbag System – check function/damage*		•		•		•		•		•		•		•		•		•		•		•		•
Battery – check electrolyte level		•		•		•		•		•		•		•		•		•		•		•		•
Engine – check for leaks				•				•						•				•						•
Pollen Filter – replace				•				•						•				•						•
Cooling System – check level				•				•						•				•						•
Transmission – check for leaks**				•				•						•				•						•
Tires/Spare – check condition				•				•						•				•						•
Driveshaft – check boots				•				•						•				•						•
OBD – check DTC memory				•				•						•				•						•
Door Hinge – lube				•				•						•				•						•
Headlights – check and adjust if necessary				•				•						•				•						•
Exhaust System – check for damage and leaks				•				•						•				•						•
Sunroof Frame – clean and lubricate				•				•						•				•						•
Road Test				•				•						•				•						•
Power Steering – check fluid level										•								•						
Brake Fluid***										•								•						
Check ATF and Differential for leaks and level; add if necessary										•								•						
Front Axle – check dust seals, ball joints, tie rods										•								•						

*Airbag System – visual check every 12 months regardless of mileage

**Manual Transmission – check level; add if necessary

***Brake Fluid – change every 2 years regardless of mileage