

ARTICLE BEGINNING

1992 WIRING DIAGRAMS
Volkswagen Wiring Diagrams

Volkswagen; Passat


COMPONENT LOCATION MENU

COMPONENT LOCATIONS TABLE

Component	Figure No. (Location)
A/C COMPRESSOR CLUTCH	6 (D 23)
A/C SWITCH	6 (E 21)
A/T CONSOLE LIGHT	5 (B 17)
A/T CONSOLE UNIT	1 (B, D 4)
ABS SYSTEM	7 (B, E 24, 27)
ALTERNATOR	1 (A 3)
ANTI-THEFT CONTROL UNIT	6 (A, B 20, 23)
ASHTRAY LIGHT	4 (A 12)
AUTOMATIC SHOULDER BELTS	8 (A, D 30, 31)
BACK-UP LIGHT SWITCH	3 (A 11)
BATTERY	1 (A 2)
BRAKE FLUID LEVEL WARNING SWITCH	7 (B, C 27)
CASSETTE STORAGE LIGHT	4 (A 14)
CIGARETTE LIGHTER	4 (A 12)
COOLANT TEMPERATURE SENSOR	3 (D 10)
COOLING FAN	1, 6 (E 2, 3, B-C 22, 23)
CRUISE CONTROL SYSTEM	1 (C, D 2, 3)
DEFOGGER GRID	5 (A 17, 18)
EMERGENCY FLASHER SWITCH	4 (E 12, 13)
FRESH AIR CONTROL LEVER LIGHT	4 (A 12)
FRESH AIR FAN	3, 6 (E 6-11, D-E 20, 21)
FUEL PUMP & FUEL TANK UNIT	3 (E 8)
FUSE #23	6 (C, D 20)
FUSE #51	2 (D 5)
FUSE RELAY PANEL	3-6 (B, C 8-21)
FUSE RELAY PANEL LAYOUT	8 (D, E 28, 30)
HEADLIGHT SWITCH	5 (A 16, 17)
HEATED O2 SENSOR	2 (A 5)
HEATED SEATS	7 (A, B 24, 27)
HORN SWITCH	5 (E 17)
HYDRAULIC UNIT	7 (E 25, 27)
IDLE STABILIZER VALVE	2 (B 5)
IGNITION BOOSTER	7 (D, E 7)
IGNITION SWITCH	3 (A 8, 9)
INSTRUMENT CLUSTER	8 (A, C 28, 30)
INTERIOR LIGHT	9 (D, E 33, 34)
LEFT FRONT DOOR LOCK SWITCH	9 (D 32)
LEFT FRONT WINDOW SWITCH	9 (A 34)
LEFT REAR ASHTRAY LIGHT	5 (B 17)


LEFT REAR MICRO SWITCH	8 (C, D 29)
LEFT SEAT BELT CONTROL UNIT	8 (C, D 31)
LEFT SEAT BELT SWITCH	4 (A 15)
MCU DIAGNOSTIC CONNECTOR	2 (C, D 7)
MIRROR HEATERS	5 (B 19)
MOTRONIC CONTROL UNIT (MCU)	2 (A, C 7)
MULTI-FUNCTION SWITCH	2 (A 4)
OIL PRESSER SWITCH	3 (D 10)
PARK BRAKE SWITCH	4 (A 14)
POWER DOOR LOCKS	9 (E 32)
POWER MIRROR SWITCH	5 (A 19)
POWER WINDOWS	9 (A, C 32, 34)
PROGRAM SWITCH	2 (E 5, 6)
RADIATOR COOLING FAN AFTER RUN CONTROL UNIT	1 (E 3)
RADIATOR COOLING FAN THERMO SWITCH	1, 6 (D, E 3 B 23)
READING LIGHTS	9 (D, E 34)
REAR DEFOGGER SWITCH	5 (A 17)
REAR WIPER MOTOR	5 (E 19)
RIGHT SEAT BELT CONTROL UNIT	8 (A, B 31)
SEAT BELT FUSE	8 (D 30)
STARTER	1 (A 3)
STARTER INTERLOCK BACK-UP LIGHT RELAY	1 (B, C 3)
STOP LIGHT SWITCH	4 (D 15)
SUN ROOF	8 (E 30, 31)
TRUNK LIGHT	6 (A 22, 23)
VANITY MIRROR	9 (D 33, 34)
WARNING INDICATORS	4 (A 13)
WASHER NOZZLE HEATERS	5 (A 18)
WIPER/WASHER SYSTEM	5 (D, E 16, 19)

WIRING DIAGRAMS

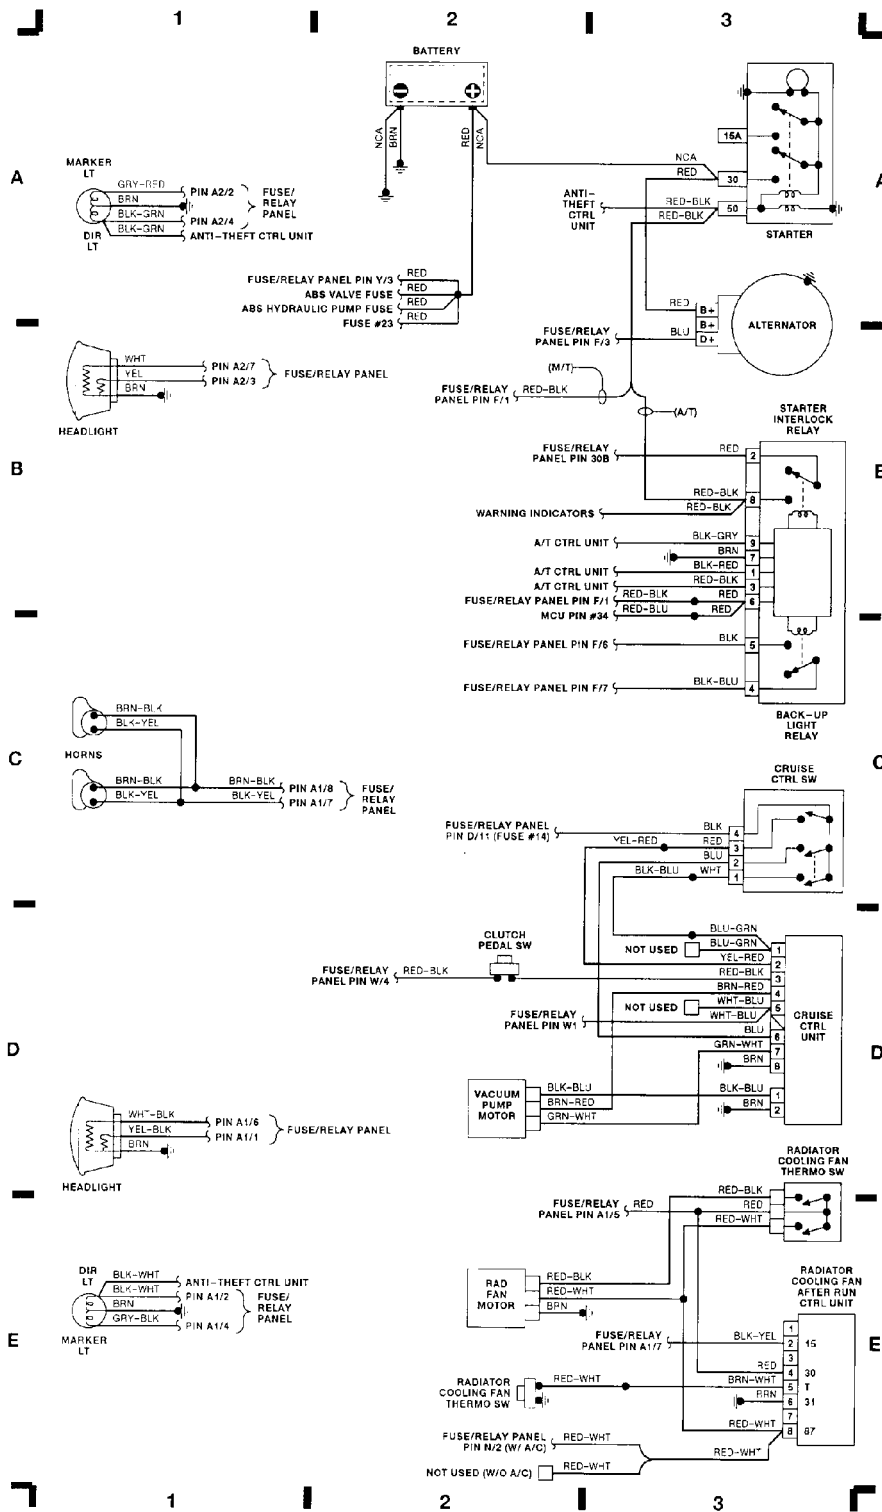


93F03826

Fig. 1: Engine Compartment, Headlights (Grid 1-3)

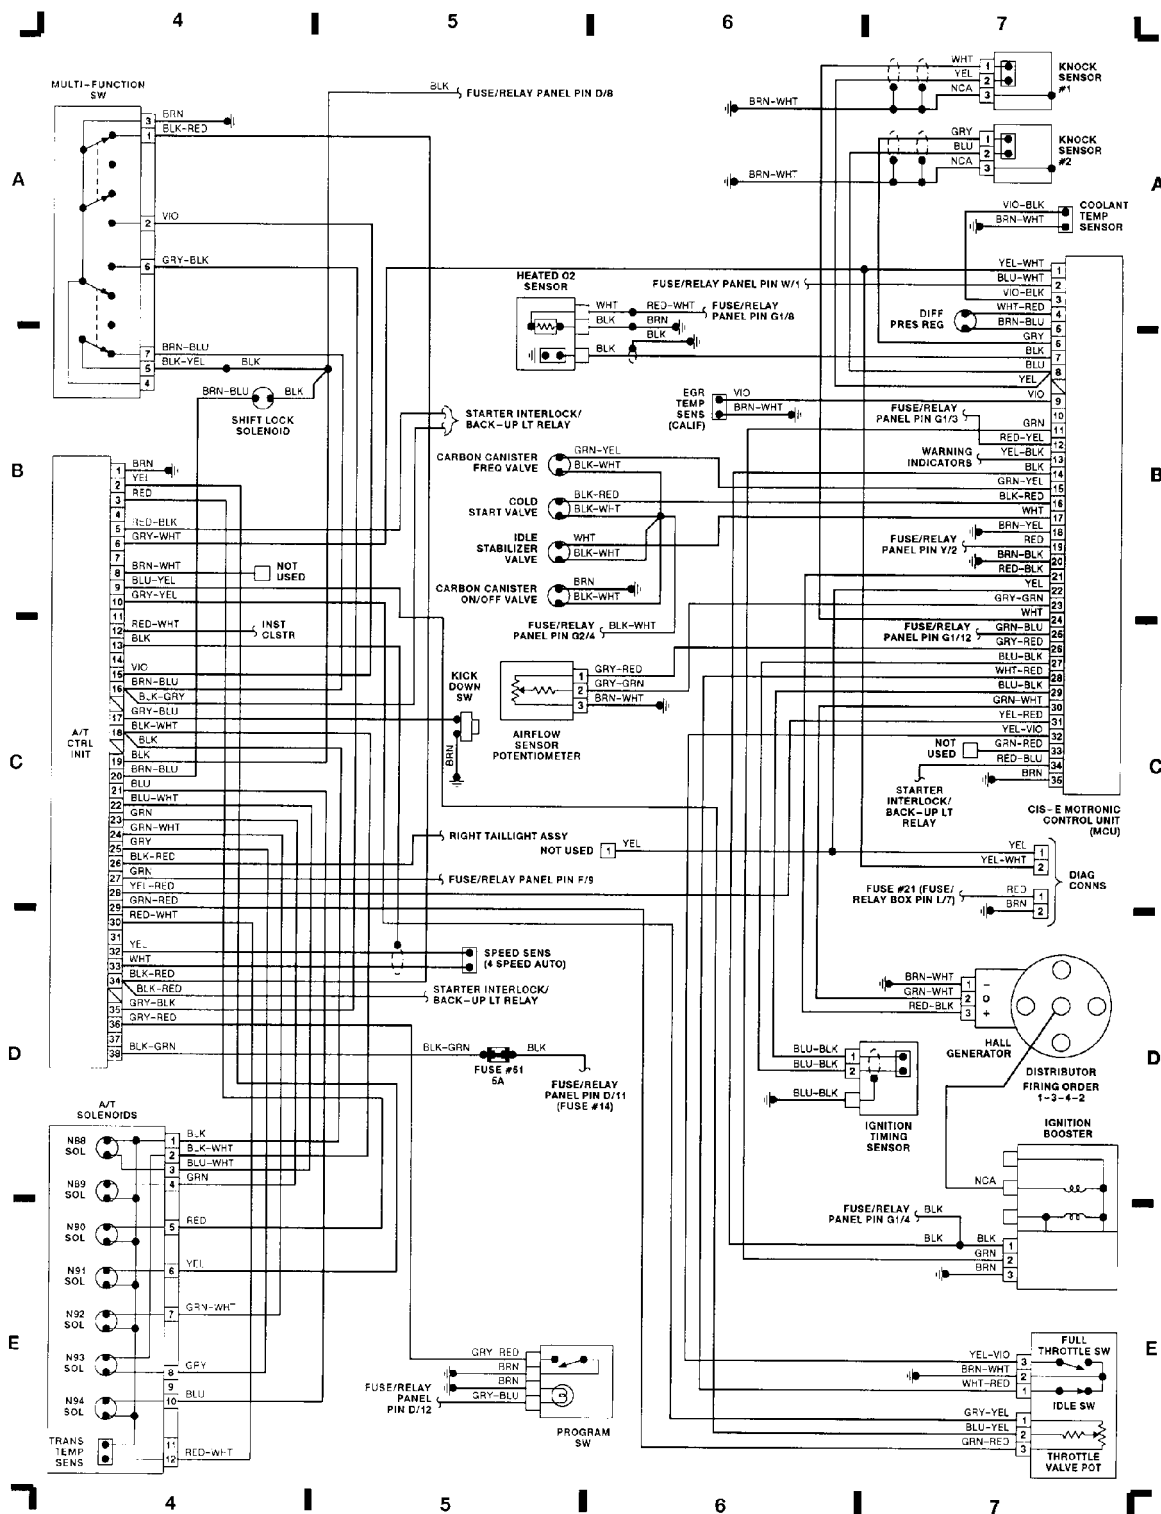


93H03827

Fig. 2: A/T Control Unit, CIS-E Motronic Control Unit (Grid 4-7)

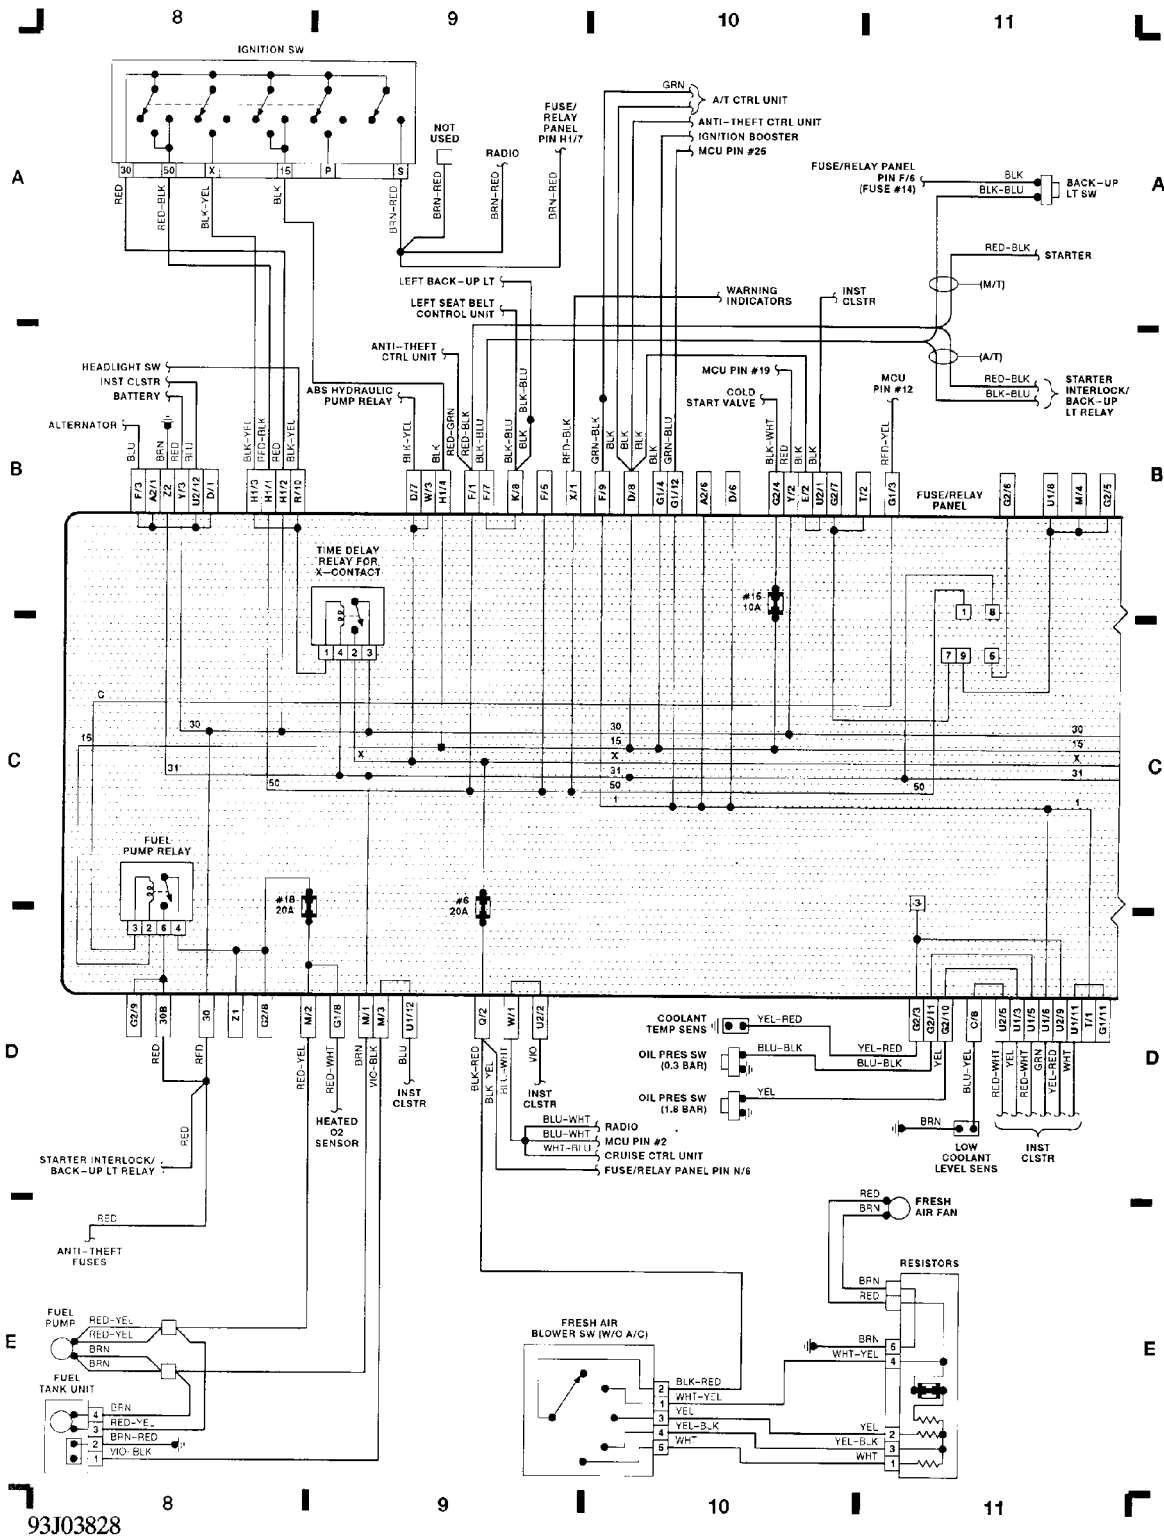

93J03828

Fig. 3: Ignition Sw, Fuse Relay Panel, Fuel Tank Unit (Grid 8-11)

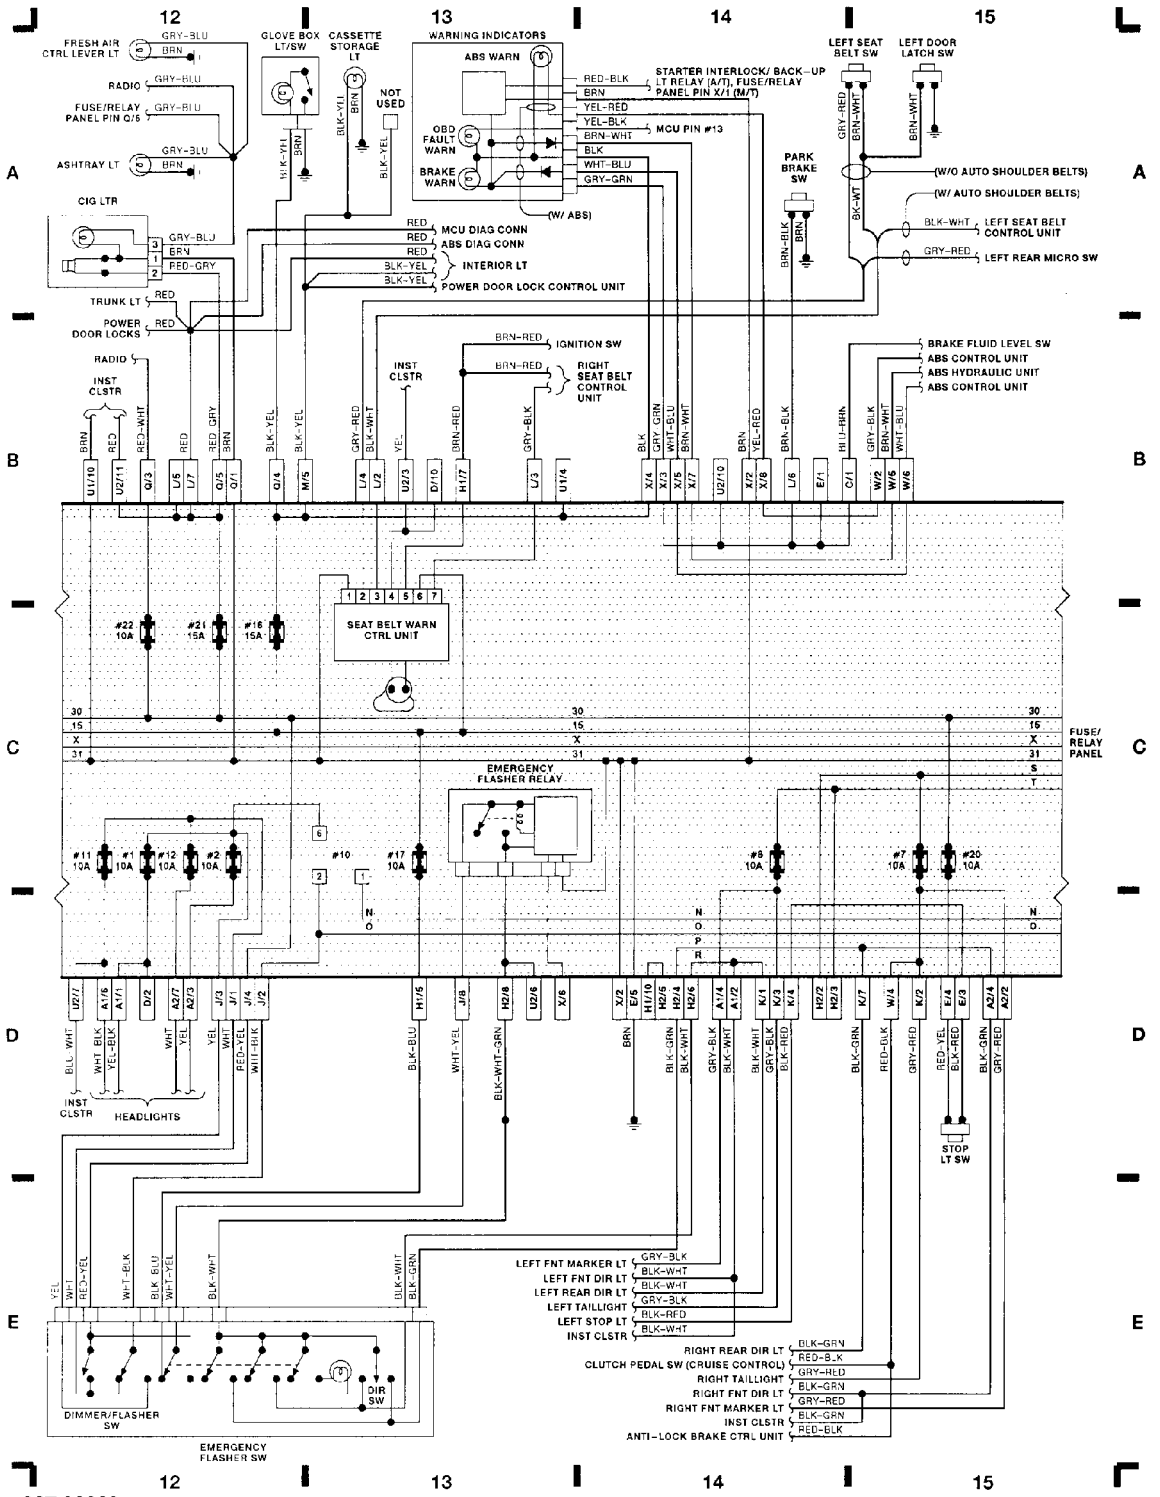

93B03829

Fig. 4: Emergency Flasher Sw, Fuse Relay Panel (Grid 12-15)



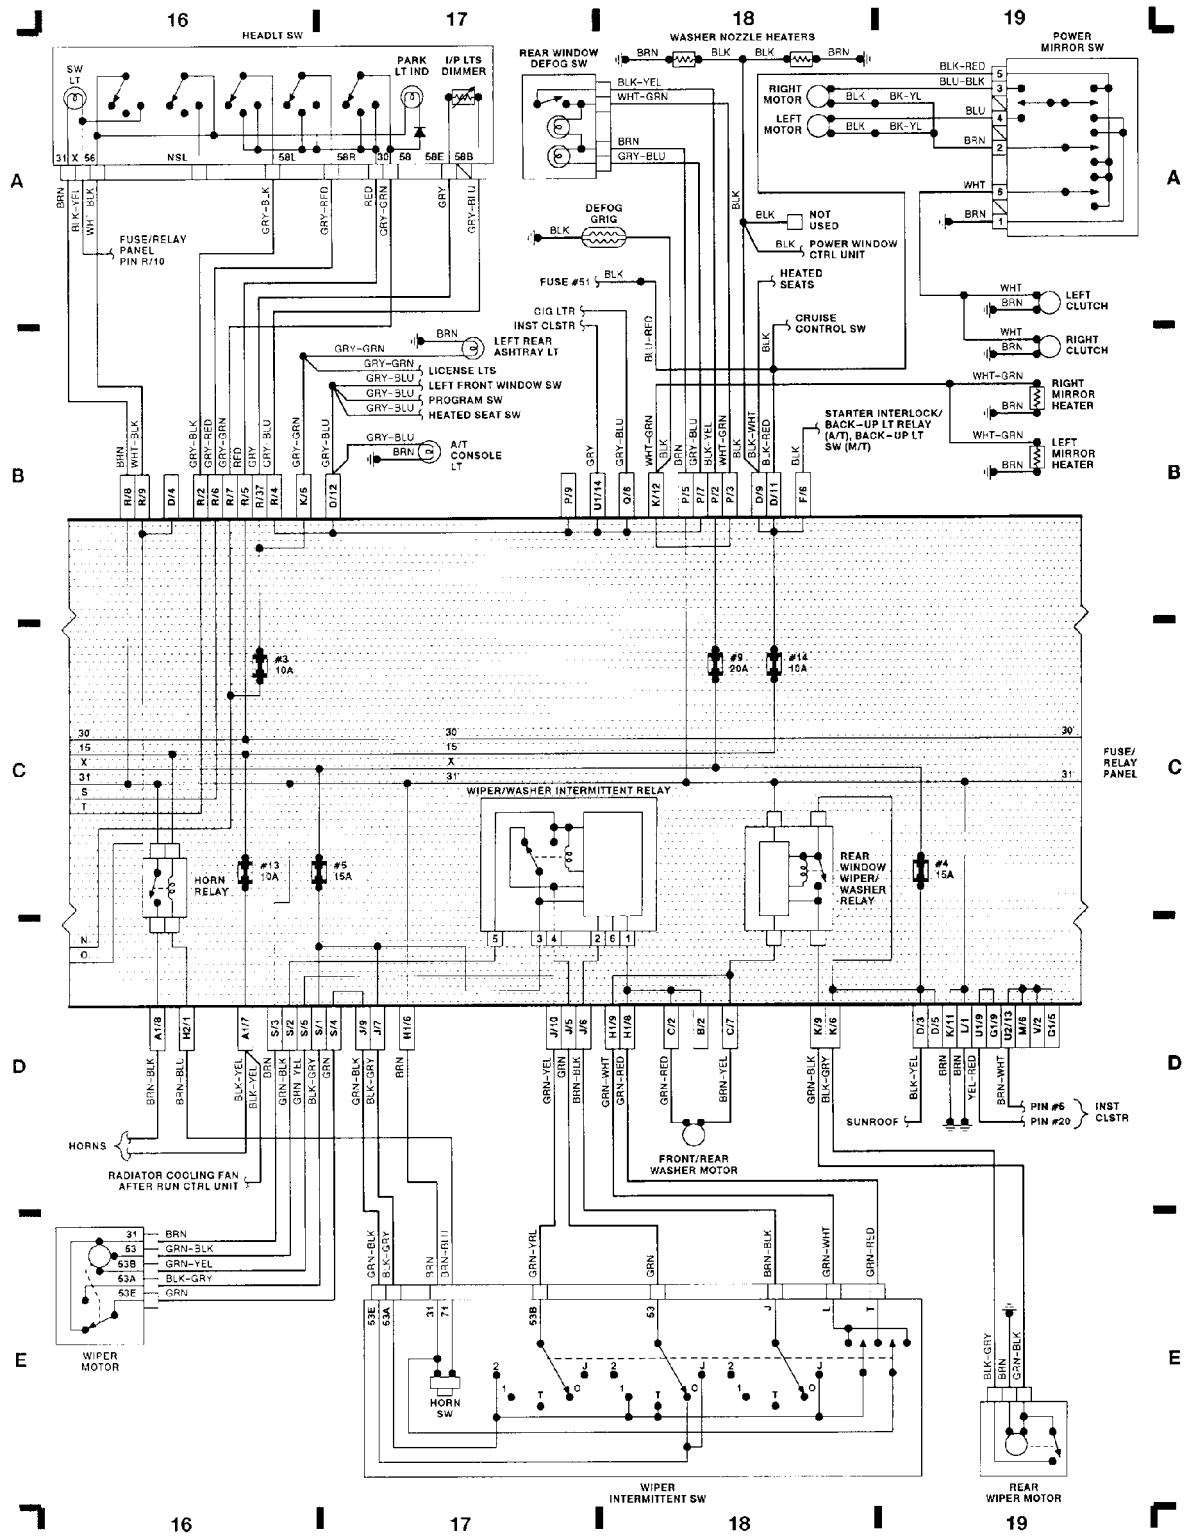


Fig. 5: Power Mirror/Headlight Sw, Fuse Relay Panel (Grid 16-19)

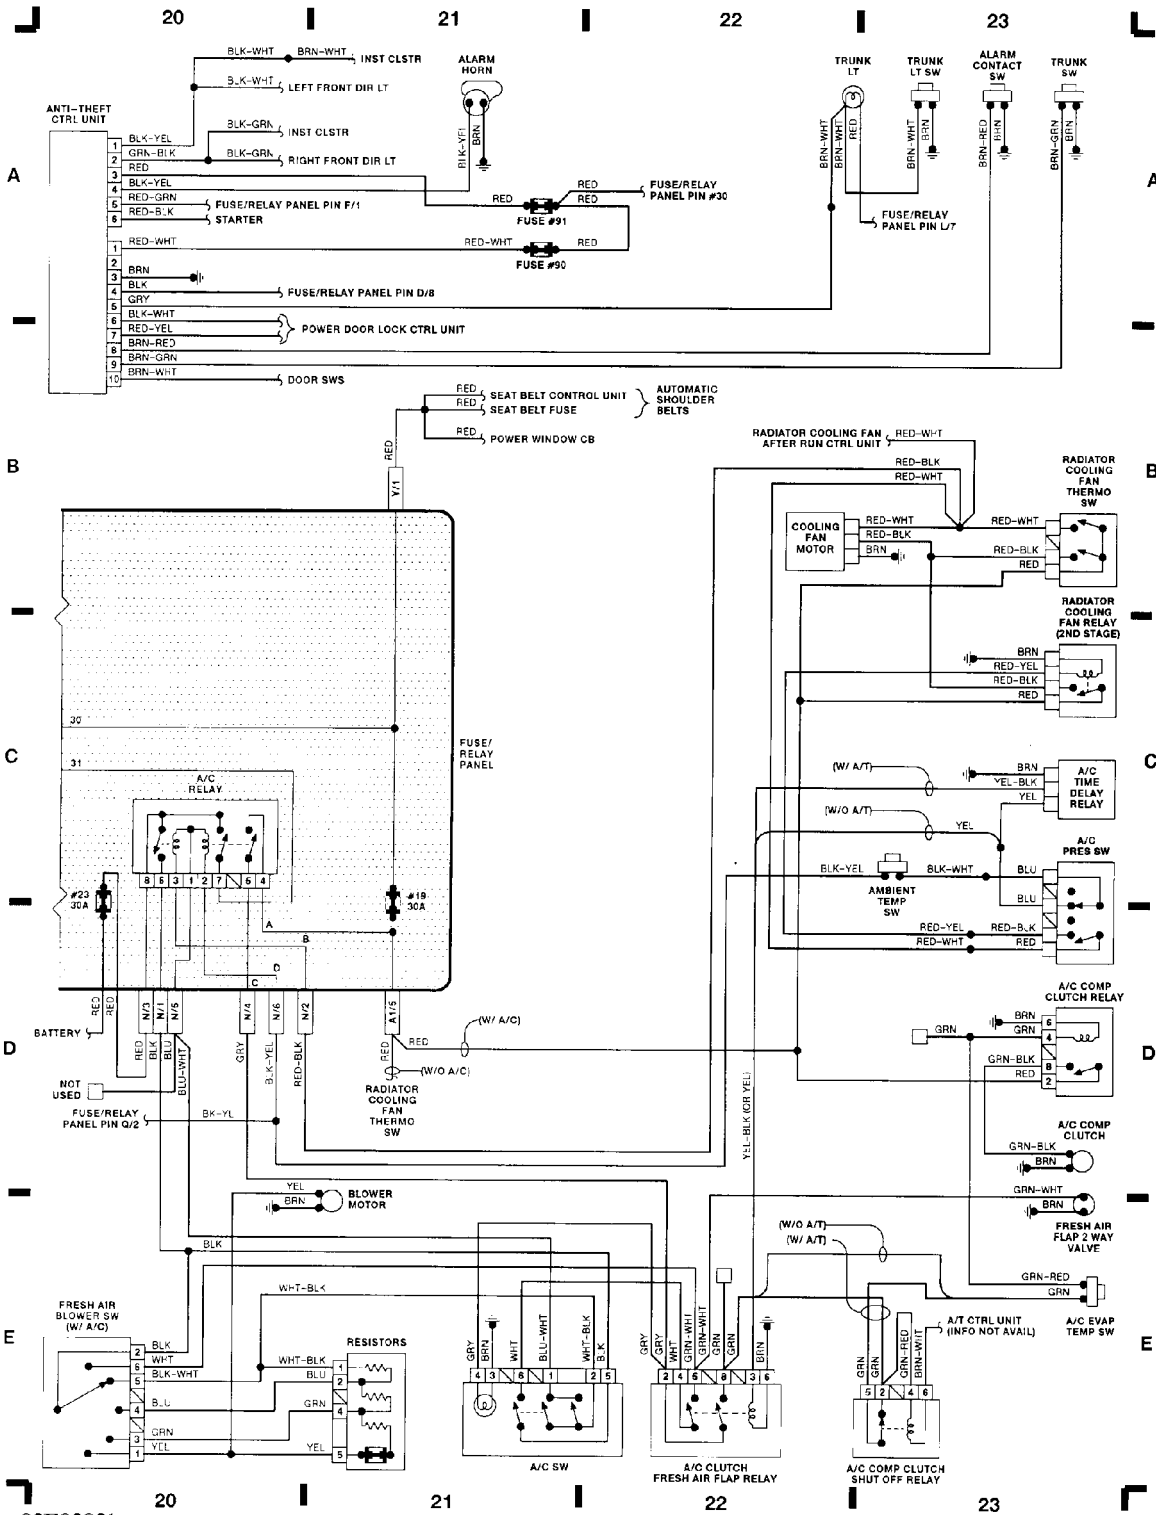


93F03831

Fig. 6: Anti-Theft Control Unit, Fuse Relay Panel (Grid 20-23)

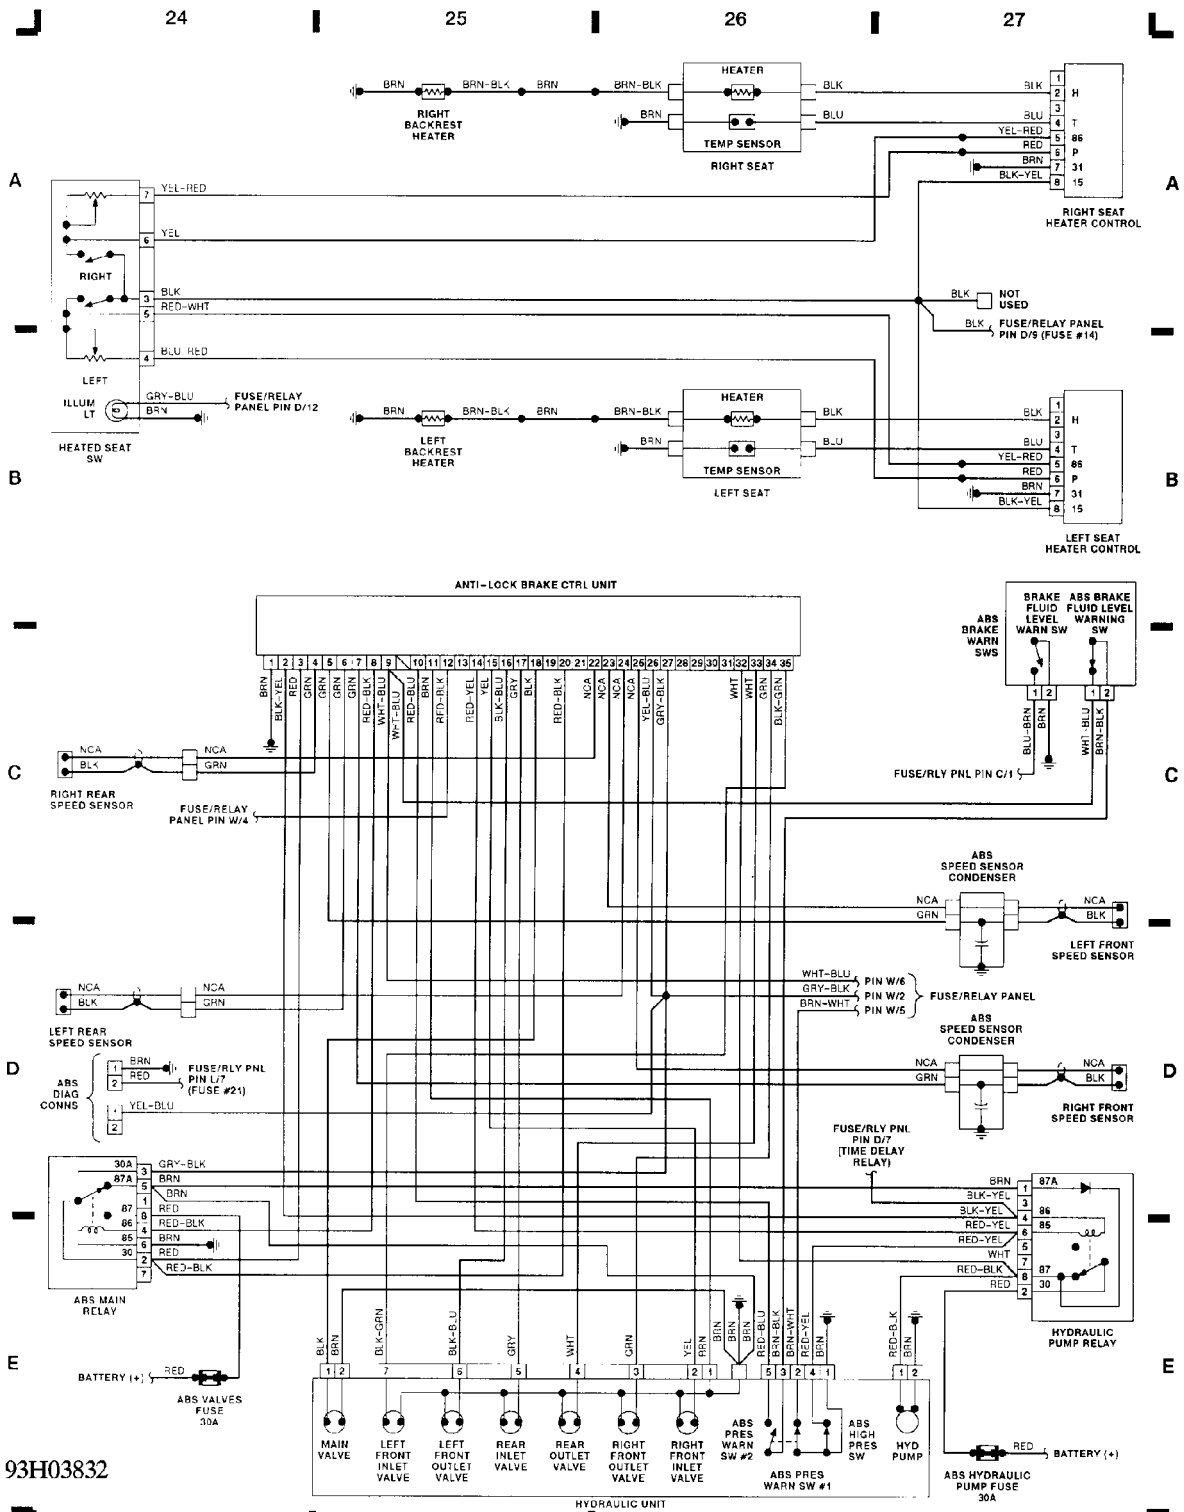

93H03832

Fig. 7: Anti-Lock Brake Control Unit, Hydraulic Unit (Grid 24-27)

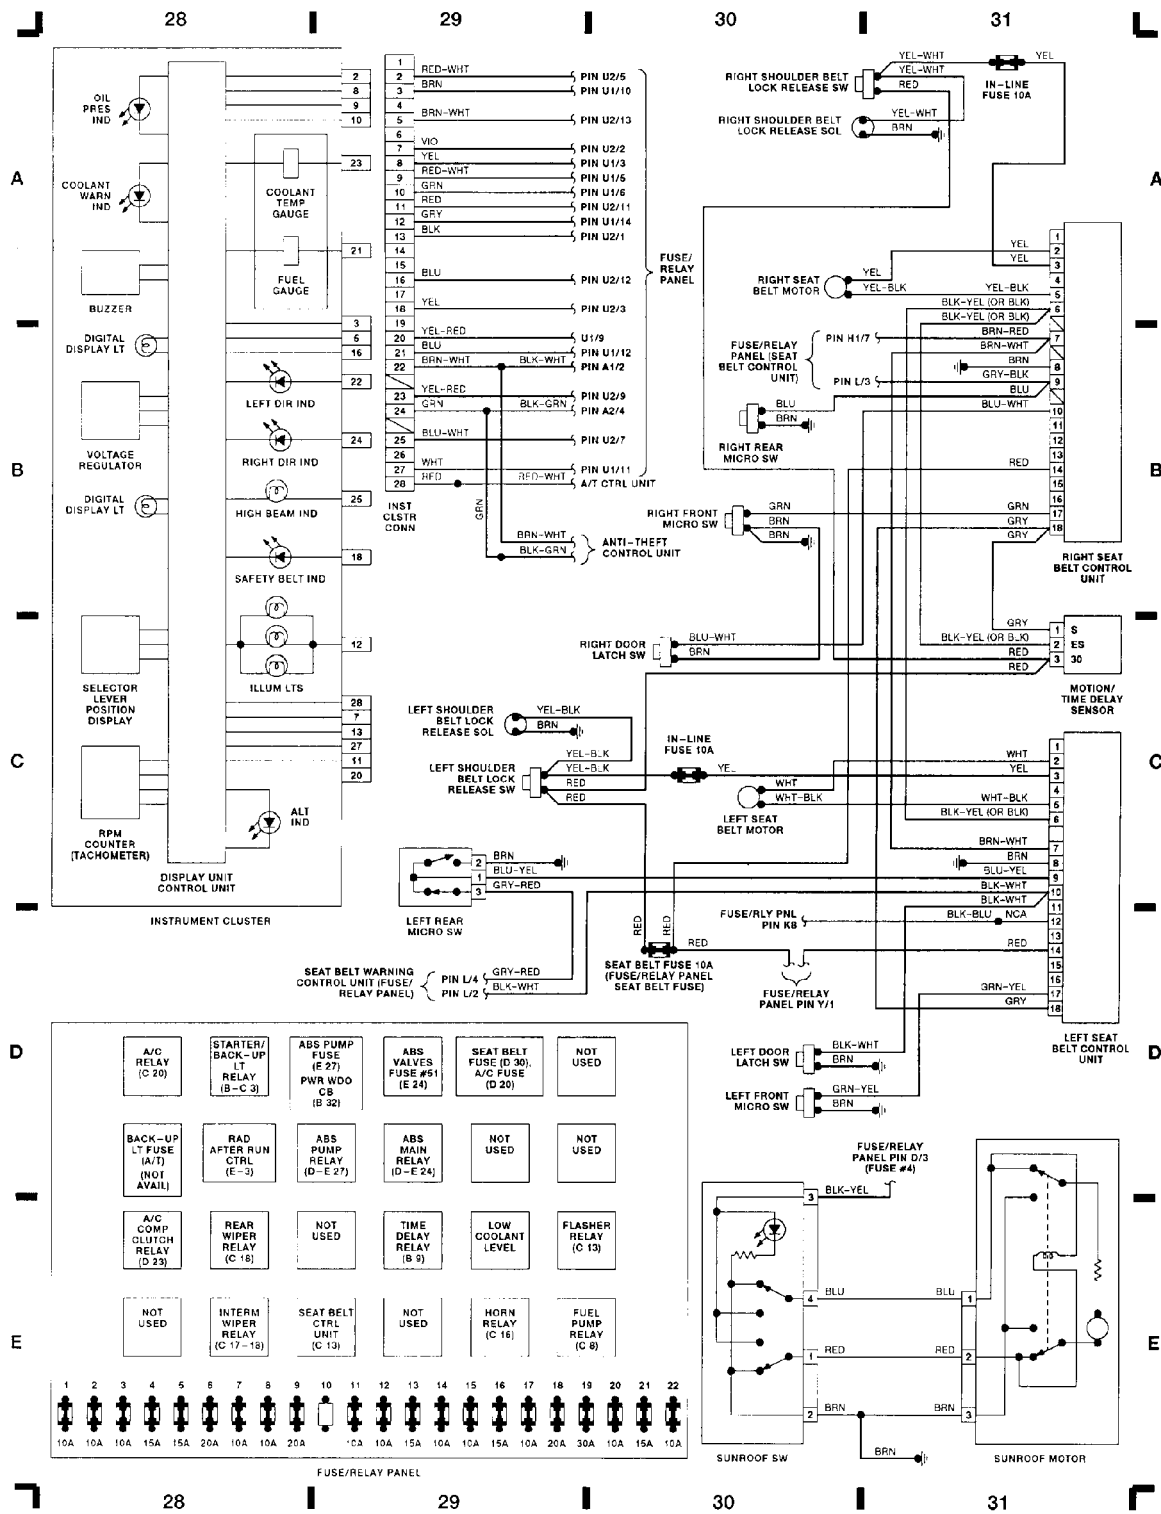

93J08333

Fig. 8: Instrument Cluster, Fuse Panel Layout (Grid 28-31)

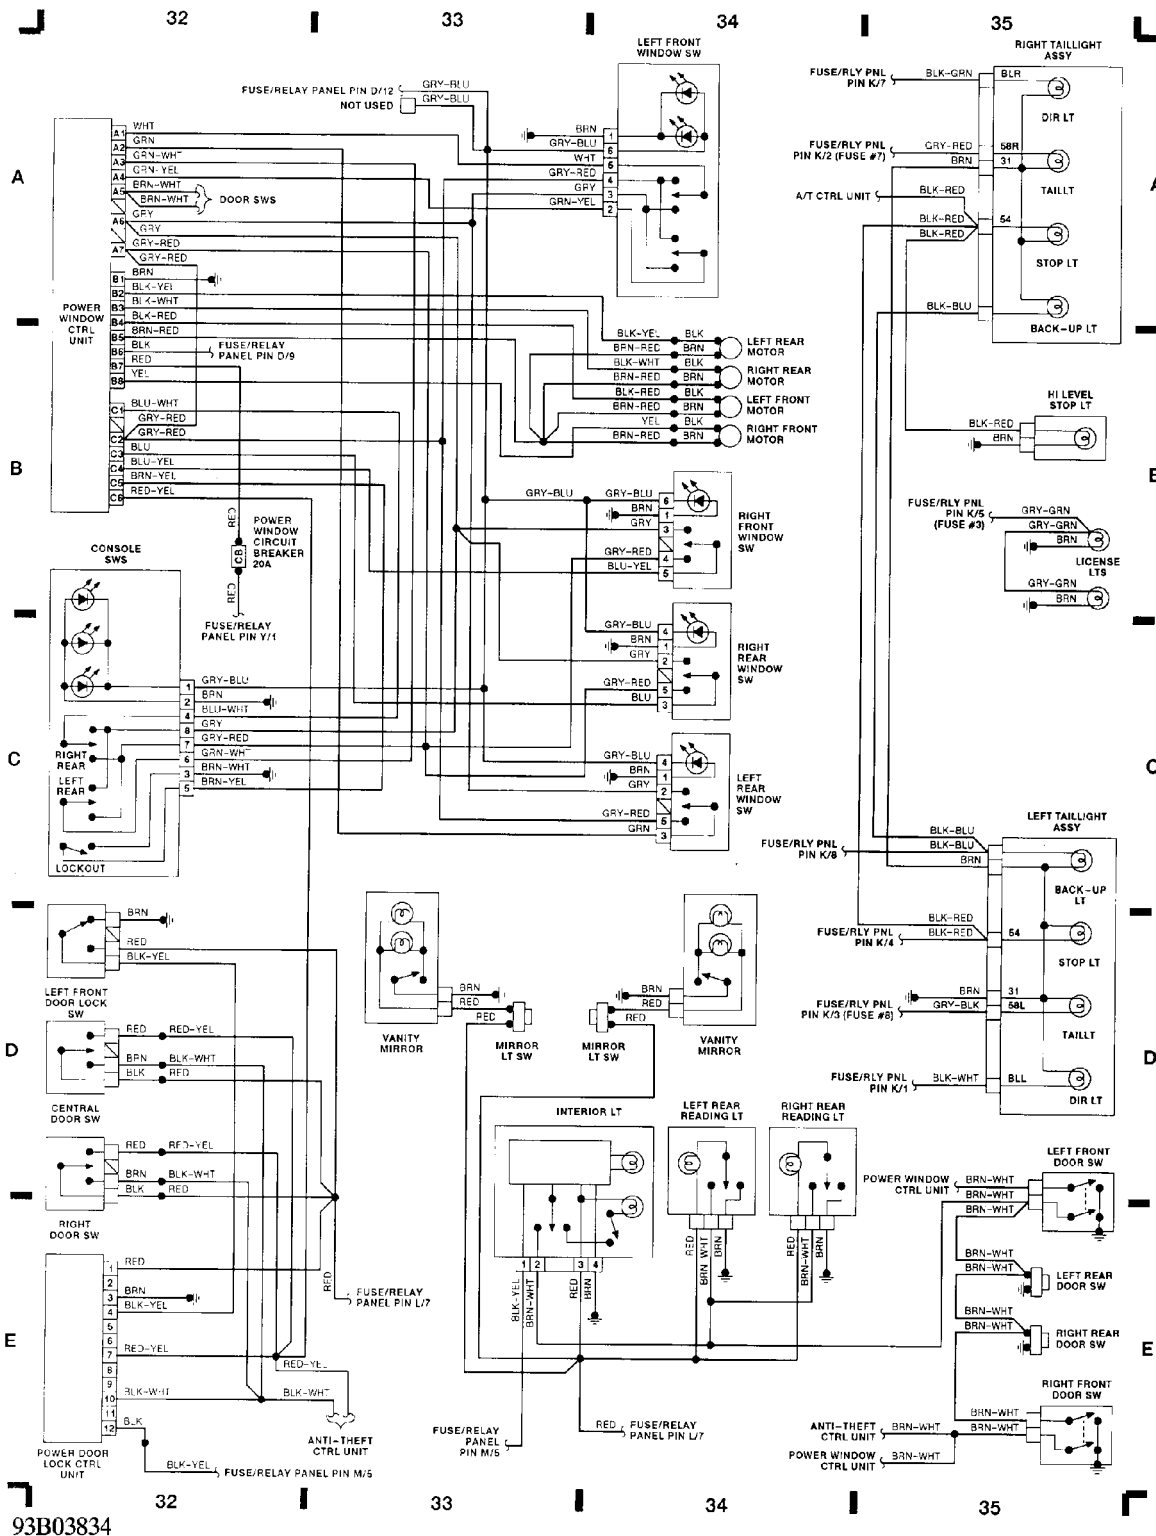


Fig. 9: Power Window/Door Sw, Tail Light (Grid 32-35)

END OF ARTICLE