CONTROLS AND EQUIPMENT

Service Interval Display*



An impending service event will be indicated 1,200 miles (2,000 kilometres) before the service interval is reached.

If s 1,2 due will abo

> forn If th thori

• Tu

• The

• Pri

indifore forming t he required service.

ne

D

tri

lei

th

If the service is not performed by your authorized Audi Dealer, the display must be reset as follows:

- Turn off the ignition.
- Then, turn on the ignition again while holding the button (2) down. "SER-VICE" will appear in the display.
- Press the button (1) until the "SER-VICE" text is cleared. This display should now show the next service event.