

5.8 Exploded view - rear shelf

1 - Bolt

- 2 Nm

2 - Clip

- 4x
- Insert in rear shelf
- Remove any clips left in body mounting points using removal tool - T40280- and insert in rear shelf for installation
- Renew clips if damaged or deformed


3 - Rear shelf

Equipment versions:

- ◆ Without sun blind
- ◆ With sun blind
- ◆ Without sound system
- ◆ With sound system
 - Removing and installing ⇒ [page 292](#)
 - Insert rear shelf in rear window frame and press on until it engages audibly.

4 - Cap

- For child seat anchor
- 3x
- Depending on equipment version
- Removing and installing ⇒ [page 127](#)
- Press on until it engages audibly

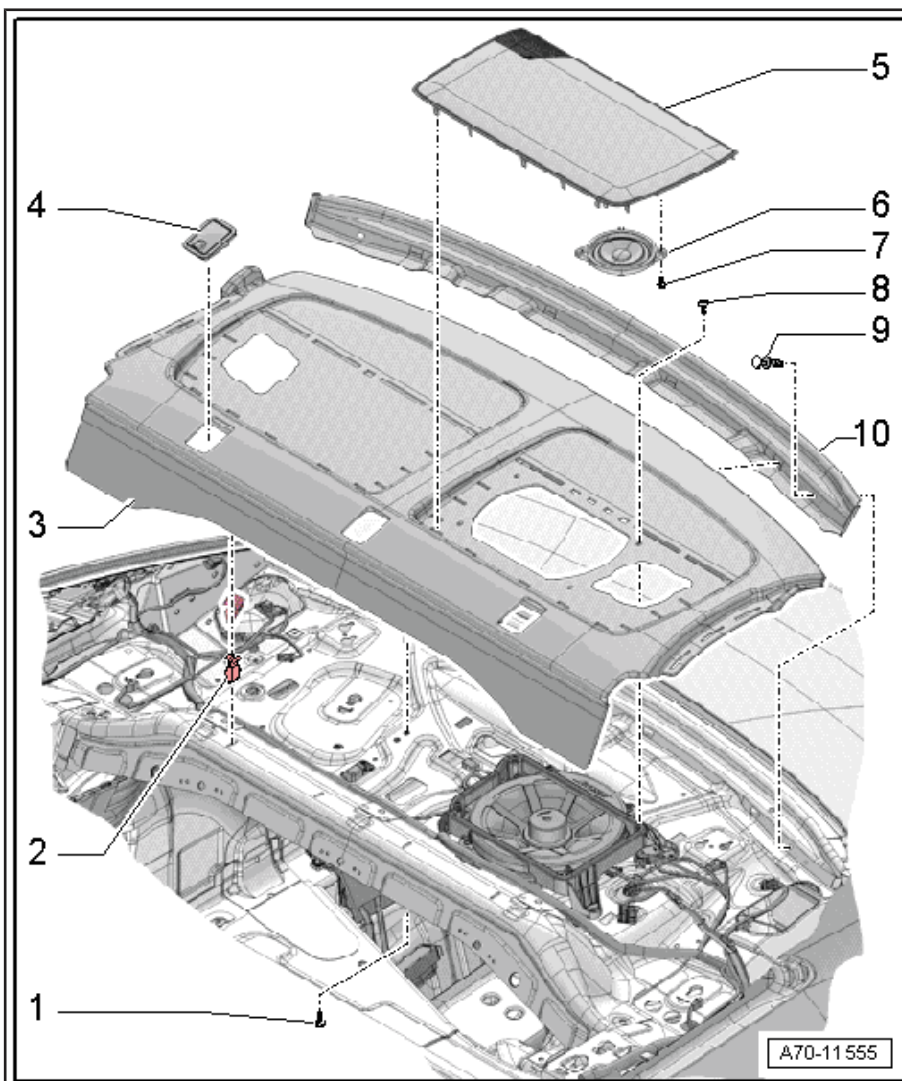

5 - Loudspeaker trim

- 2x
- Depending on equipment version
- Removing and installing ⇒ [page 294](#)
- Insert in rear shelf and press on until it engages audibly

6 - Loudspeaker

- 2x
- Depending on equipment version
- Removing and installing ⇒ Communication; Rep. gr. 91 ; Sound system; Overview of fitting locations - sound system

7 - Bolt

- 4x
- Tightening torque ⇒ Communication; Rep. gr. 91 ; Sound system; Overview of fitting locations - sound system

8 - Bolt

- 4x

- 2 Nm

9 - Fastener

- 2x

10 - Trim

- For rear window frame

5.9 Removing and installing sill panel trim

⇒ [“5.9.1 Removing and installing sill panel trim \(front\)”, page 277](#)

⇒ [“5.9.2 Removing and installing sill panel trim \(rear\)”, page 278](#)

5.9.1 Removing and installing sill panel trim (front)

Special tools and workshop equipment required

- ◆ Removal wedge - 3409-



- ◆ Removal tool - T40280-




Removing

- Remove dash panel cover (side) ⇒ [page 238](#) .
- Unclip trim cover -1- for A-pillar (bottom) using removal wedge - 3409- -arrow- and detach downwards from A-pillar trim (top) -2-.
- Remove B-pillar trim (bottom) ⇒ [page 283](#) .

Driver side:

- Remove dash panel cover (driver side) ⇒ [page 23](#) .
- Remove operating lever for bonnet ⇒ General body repairs, exterior; Rep. gr. 55 ; Bonnet; Removing and installing operating lever for bonnet .

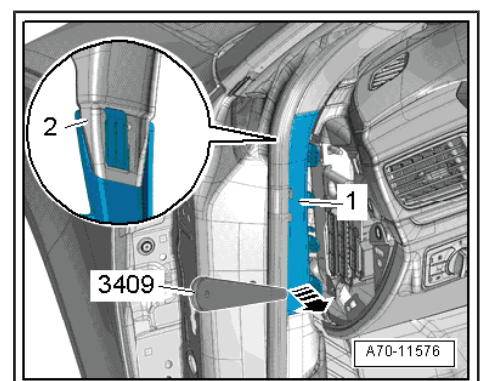


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

5.16 Removing and installing rear shelf

Special tools and workshop equipment required

- ◆ Removal lever - 80 - 200-

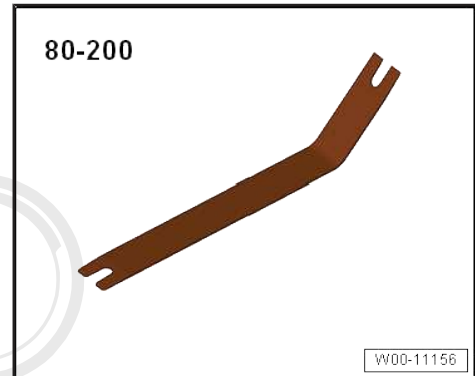

- ◆ Removal tool - T40280-




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Removing


- Equipment version with folding rear seat backrest: Fold down rear seat backrest.
- Equipment version with fixed rear seat backrest: Remove fixed rear seat backrest ⇒ [page 538](#) .
- Equipment version with multi-contour seat: Remove multi-contour seat ⇒ [page 542](#) .
- Remove centre belt guide (rear) ⇒ [page 111](#) .
- Remove centre belt end fitting (rear) ⇒ [page 121](#) .
- Remove D-pillar trim ⇒ [page 287](#) .

Equipment version with sound system:

- Remove loudspeaker trim (left-side) in rear shelf ⇒ [page 294](#) .
- Remove bolts -1- and -2-.

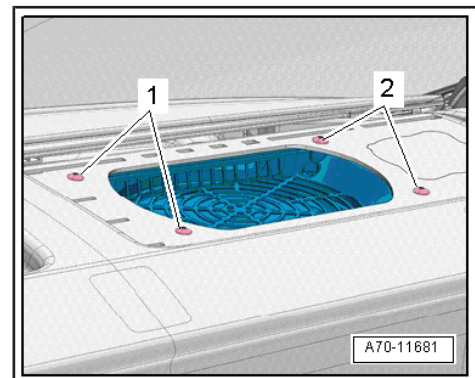


- Unscrew bolt -1- for rear shelf in luggage compartment.

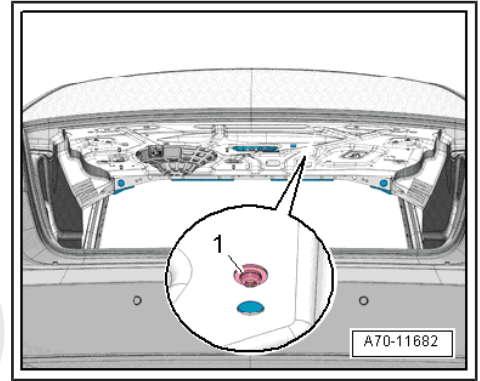

Equipment version with sun blind:


- Unclip rear shelf -1- at front using removal lever - 80 - 200- -arrows A-.
- Disengage rear of rear shelf from sun blind -arrows B- and take out towards front.

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

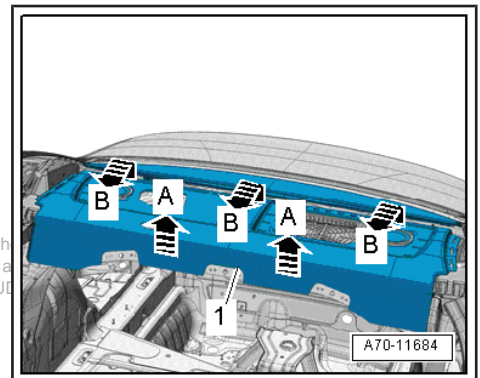

Equipment version without sun blind:

- Unclip rear shelf -1- at front using removal lever - 80 - 200- -arrows A-.
- Pull rear shelf forwards out of mountings in rear window frame -arrow B- and take out.

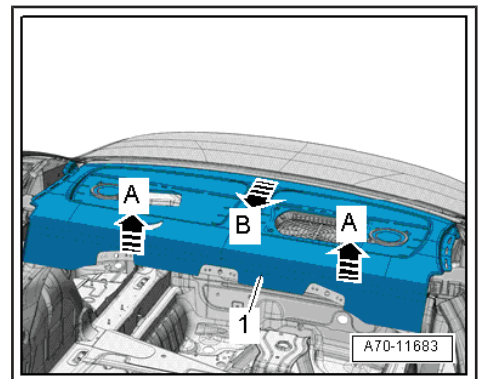


Installing

Installation is carried out in the reverse order; note the following:

- Insert rear shelf -1- in rear window frame and tighten bolts.
- Pins on rear shelf must engage in mountings -arrow- in rear window frame.

Notes for installation: tightening torques, renewing components etc. => "5.8 Exploded view - rear shelf", page 276

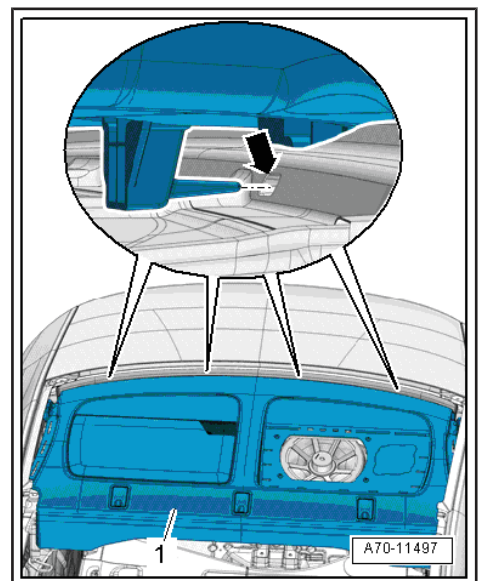


5.17 Removing and installing loudspeaker trim

Note

Be very careful when removing and installing, as loudspeaker trim can be damaged quite easily.


Special tools and workshop equipment required

- ◆ Wedges - T10383-

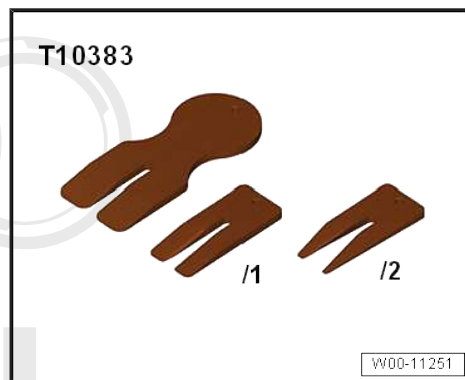

Removing

- Equipment version with folding rear seat backrest: Fold down rear seat backrest.
- Using wedge -T10383/1- or screwdriver, carefully unclip loudspeaker trim -1- off rear shelf along gap at front and sides -arrow-.
- Equipment version with loudspeaker: Unplug electrical connector and pull out loudspeaker trim towards front.

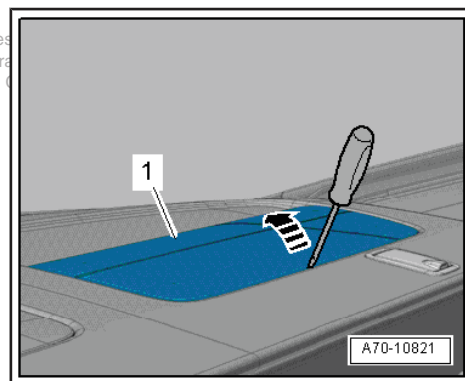

Installing

Installation is carried out in the reverse order; note the following:

Notes for installation: tightening torques, renewing components etc. ⇒ ["5.8 Exploded view - rear shelf", page 276](#)