

2007 Model Year Volkswagen Maintenance

2007 Model Year Volkswagen Maintenance (all vehicles)

Date: May 2, 2006 Number: VMS-06-02

This Maintenance Service Circular, VMS-06-02 DATED May 2, 2006, SUPERSEDES Maintenance Service Circular VMS-06-01 DATED February 8, 2006.

This Service Circular contains the Inventory Maintenance Checklist, Suggested Repair Times, and Scheduled Maintenance Intervals (by Engine) for 2007 Model Year Volkswagen vehicles

<u>Note:</u> Perfect Delivery Inspection (PDI) and Inventory Maintenance Suggested Repair Times are applicable to United States only.

Inventory Maintenance Checklist	<u>Page</u> 2
Suggested Repair Times	3 - 5
Scheduled Maintenance Intervals (by Engine)	6 - 13



2007 Model Year Volkswagen Maintenance

	Invol	4am/ M	-intons	CI											
_	-	itory ivid	laintena	nce Gi	IECKIISI										
Stock#	#														
VIN#				<u>.</u>							· · · · · · · · · · · · · · · · · · ·		,		
	<u></u>			<u></u>											
			- • •				30) Days		60	Days	90) Days	120) Days
			entory Main etc.) until t		Checklist e cle is sold.	very									
						ļ	Dαι ο ρ	performed:	Da	ite po	erformed:	Date p	performed:	Date P	erformed:
							ОК	Needs attention	Ok	K	Needs attention	ОК	Needs attention	ОК	Needs attention
Rechar	rge if nec	cessary.*			in. 12.5 Volts]					
	Note: Jump-starting may damage ECM. Record Midtronic code on warranty claim/R.O.												_		
Fxterio	or and int	terior surf	aces mus	t he clear	n and free of				1	7					
			scratches,							J					
Check	Tires for	proper tr	ansportati	ion inflation	on pressure). **]					
			m of 1 mile		ometers). mph (32 km	n/h).									
Affix ne	ext 30-Da	ay sticker.	***			I]					
scratch	nes, dings	gs, or dents	n removed, ts. If any de	defects are	re found, cor	ntact]					
Service	† IVIai iay	31 IO Sono	Quie iiiiiii	eulale 101	Jaii.	Į							<u>i </u>		
otes:															
f battery SIC se		d, discon	nected o	or below	10 volts, ı	use V	AS 5051 /	/ VAS 5052	? to res	et er	ngine and to	ransmiss	sion manage	ement sys	stems to
Check	transpc	ortation ti	re press	ure ever	ry 90 days	there	after.								

© 2006 Volkswagen of America, Inc.



2007 Model Year Volkswagen Maintenance

Date: May 2, 2006 Number: VMS-06-02

Suggested Repair Times (SRT)

Suggested Repair	Times (SKT)			Mod	lel		
Labor Operation	Engine	Jetta/ CITY Jetta	Rabbit/ GTI/CITY Golf	Passat	New Beetle	Eos	Touareg
		Perfect Delive	ery Inspection	on			
01 01 00 31	U.S. Only – Includes Car Wash, Interior Refresh and Rapgard® Removal	125	125	125	90	125	180
01 01 00 31	1.9L TDI (Canada only)	90	90				
01 01 00 31	2.0L (Canada only)	90	90				
		Inventory N	laintenance		T		I
01 05 00 22	U.S. Only	25	25	25	25	25	25
01 00 00 22		At 5,000 Mile					
			(0,000 1111	,			
03 05 00 84	1.9L TDI (Canada only)	50			55		
03 05 00 82	2.0L (Canada only)	40	40				
03 05 00 82	2.0L TFSI	35	35	40		45	
03 05 00 83	2.5L	35	35		35		
N/A	3.2L					N/A	
03 05 00 85	3.6L FSI			55			55
03 05 00 86	4.2L FSI						55
03 05 00 84	5.0L V10						75
		At 10,000 Mile	es (16,000 Kı	m)		_	
03 11 00 84	1.9L TDI (Canada only)	90			95		
03 11 00 82	2.0L (Canada only)	80	80				
03 11 00 82	2.0L TFSI	75	75	100		105	
03 11 00 83	2.5L	75	75		75		
N/A	3.2L					N/A	
03 11 00 85	3.6L FSI			115			100
03 11 00 86	4.2L FSI						100
03 11 00 84	5.0L V10						120

Note:

Perfect Delivery Inspection (PDI) and Inventory Maintenance suggested repair times are applicable the United States only.

© 2006 Volkswagen of America, Inc.



2007 Model Year Volkswagen Maintenance

Date: May 2, 2006 Number: VMS-06-02

Suggested Repair Times (SRT)

Suggested Repair	Times (GIVT)			Мос	del		
Labor Operation	Engine	Jetta/ CITY Jetta	Rabbit/ GTI/CITY Golf	Passat	New Beetle	Eos	Touareg
	A	t 20,000 Mil	es (32,000 K	m)			
03 21 00 84	1.9L TDI (Canada only)	175			180		
03 21 00 82	2.0L (Canada only)	165	165				
03 21 00 82	2.0L TFSI	150	150	150		155	
03 21 00 83	2.5L	150	150		150		
N/A	3.2L					N/A	
03 21 00 85	3.6L FSI			175			190
03 21 00 86	4.2L FSI						190
03 21 00 84	5.0L V10						260
	A	t 30,000 Mil	les (48,000 K	m)			
03 30 00 84	1.9L TDI (Canada only)	90			95		
03 30 00 82	2.0L (Canada only)	80	80				
03 30 00 82	2.0L TFSI	75	75	100		105	
03 30 00 83	2.5L	75	75		75		
N/A	3.2L					N/A	
03 30 00 85	3.6L FSI			115			100
03 30 00 86	4.2L FSI						100
03 30 00 84	5.0L V10						120



2007 Model Year Volkswagen Maintenance

Date: May 2, 2006 Number: VMS-06-02

Suggested Repair Times (SRT)

Suggested Repair	Times (SIXT)			Mod	iel		
Labor Operation	Engine	Jetta/ CITY Jetta	Rabbit/ GTI/CITY Golf	Passat	New Beetle	Eos	Touareg
	A	t 40,000 Mil	es (64,000 K	(m)			
03 44 00 84	1.9L TDI (Canada only)	215			220		
03 44 00 82	2.0L (Canada only)	250	250				
03 44 00 82	2.0L TFSI	275	275	285		290	
03 44 00 83	2.5L	275	275		275		
N/A	3.2L					N/A	
03 44 00 85	3.6L FSI			290			220
03 44 00 86	4.2L FSI						220
03 44 00 84	5.0L V10						290
	A	t 50,000 Mil	es (80,000 K	(m)			
03 51 00 84	1.9L TDI (Canada only)	90			95		
03 51 00 82	2.0L (Canada only)	80	80				
03 51 00 82	2.0L TFSI	75	75	100		105	
03 51 00 83	2.5L	75	75		75		
N/A	3.2L					N/A	
03 51 00 85	3.6L FSI			115			100
03 51 00 86	4.2L FSI						100
03 51 00 84	5.0L V10						120



2007 Model Year Volkswagen Maintenance

Date: May 2, 2006 Number: VMS-06-02

					1	1	1						_
Miles (in they sends)	5	10	20	30	40	50	60	70	80	90	100	110	120
Miles (in thousands)				1									
1.9L TDI (Canada only) Kilometers (in thousands)	8	16	32	48	64	80	96	112	128	144	160	176	180
Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – reset (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•	•
Water Separator – drain	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – adapt (for 10,000 mile /16,000 Km service interval only) (where applicable)		•											
Windshield washer/headlight washer – check level; add if		•	•	•	•	•	•	•	•	•	•	•	•
necessary Brake System – check for damage and leaks, brake fluid level		_	-		•				_				
Rear spoiler – lubricate (New Beetle only)		•	•	•		•	•	•	•	•	•	<u> </u>	•
Wheels – rotate		•		•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral		•	•	•	•	•	•	•	•	•	•	•	•
position switch Tires – check tread depth and pressure; adjust if necessary			-										
Engine – check for leaks		•	•	•	•	•	•	•	•	•	•	•	•
3			•		•		•		•		•		•
Engine OBD – check memory, purge if necessary			•		•		•		•		•		•
Fuel Filter – replace			•		•		•		•		•		•
Automatic Transmission – check for leaks			•		•		•		•		•		•
Front and Rear Lights and Interior Lights, Horn, Outlets – check			•		•		•		•		•		•
Battery – check			•		•		•		•		•		•
Door Arresters – lubricate			•		•		•		•		•		•
Sunroof Frame – lubricate (where applicable)			•		•		•		•		•		•
Cooling System – check coolant level; add if necessary			•		•		•		•		•		•
Exhaust System – check for damage and leaks			•		•		•		•		•		•
Tires/Spare wheel – check condition and pressure			•		•		•		•		•		•
Front Axle – check dust seals on ball joints and tie rods; check tie rods			•		•		•		•		•		•
Headlights – check and adjust if necessary			•		•		•		•		•	 	•
Drive Shafts – check boots					•		•		•				
Manual Transmission – check for leaks and level; add if							•					\vdash	
necessary (if applicable)			•				•		•		•		•
Road Test – check kick down, braking, steering heating and			•		•		•		•		•		•
ventilation, air conditioning, power accessories and electrical					-								
systems													
Wiper Blades – check			•		•		•		•		•		•
Underbody – check for damage			•		•		•		•		•		•
Ribbed Belt – check condition and tension; adjust if necessary			•		•		•		•		•		•
Automatic transmission final drive oil – check level and for leaks; add if necessary			•		•		•		•		•		•
Power steering – check fluid level			•		•		•		•		•		•
Dust and Pollen filter – replace	1	+			•				•				•
Automatic transmission – check ATF	1	+			•				•				
Air Cleaner – replace filter and clean housing	1	+			•							 	
Convertible top – check function and rollover protection	+	+	1									 	
Timing Belt – replace		+			_							 	Ť
Tilling Doit Topidoc		1	1					l	•	l	l	1	

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid and check bolting device for convertible top

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date)

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change air filter element and clean housing.

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available).

© 2006 Volkswagen of America, Inc.



2007 Model Year Volkswagen Maintenance

Date: May 2, 2006 Number: VMS-06-02

Ī													
Miles (in thousands)	5	10	20	30	40	50	60	70	80	90	100	110	120
2.0L (Canada only) Kilometers (in thousands)													
2.0L (Canada Only) Kilometers (Intribusarius)	8	16	32	48	64	80	96	112	128	144	160	176	180
Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – reset (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – adapt (for 10,000 mile /16,000 Km service interval only) (where applicable)		•											
Windshield washer/headlight washer – check level; add if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral position switch		•	•	•	•	•	•	•	•	•	•	•	•
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks			•		•		•		•		•		•
Engine OBD – check memory, purge if necessary			•		•		•		•		•		•
Automatic Transmission – check for leaks			•		•		•		•		•		•
Battery – check			•		•		•		•		•		•
Door Arresters – lubricate			•		•		•		•		•		•
Sunroof Frame – lubricate (where applicable)			•		•		•		•		•		•
Cooling System – check coolant level; add if necessary			•		•		•		•		•		•
Exhaust System – check for damage and leaks			•		•		•		•		•		•
Tires/Spare wheel – check condition and pressure			•		•		•		•		•		•
Front Axle – check dust seals on ball joints and tie rods; check tie			•		•		•		•		•		•
rods													
Headlights – check and adjust if necessary			•		•		•		•		•		•
Dust and Pollen filter – replace			•		•		•		•		•		•
Drive Shafts – check boots			•		•		•		•		•		•
Manual Transmission – check for leaks and level; add if necessary (if applicable)			•		•		•		•		•		•
Road Test – check kick down, braking, steering heating and ventilation, air conditioning, power accessories and electrical systems			•		•		•		•		•		•
Wiper Blades – check					•				•				•
Underbody – check for damage					•				•				•
Ribbed Belt – check condition and tension; adjust if necessary	<u> </u>	<u> </u>			•	1	<u> </u>		•				•
Automatic transmission final drive oil – check level and for leaks; add if necessary					•				•				•
Interior lights and power outlets – check	1				•	<u> </u>			•				•
Power steering – check fluid level					•	1			•				•
Spark Plugs – replace	1			1	•	1			•				•
Automatic transmission – check ATF					•				•				•
Air Cleaner – replace filter and clean housing					•				•				•
Timing Belt – check							•		•		•		
Timing Belt – replace													•

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid and check bolting device for convertible top

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date)

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change air filter element and clean housing.

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available)

© 2006 Volkswagen of America, Inc.



2007 Model Year Volkswagen Maintenance

Date: May 2, 2006 Number: VMS-06-02

Miles (in thousands) 5 10 20 30 40 2.0L TFSI Kilometers (in thousands) 8 16 32 48 66

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

Z.UL 1F31 Kilometers (In thousands)	8	16	32	48	64	80	96	112	128	144	160	176	180
Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – reset (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – adapt (for 10,000 mile /16,000 Km		•											
service interval only) (where applicable)													
Windshield washer/headlight washer - check level; add if		•	•	•	•	•	•	•	•	•	•	•	•
necessary													
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral position switch		•	•	•	•	•	•	•	•	•	•	•	•
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks			•		•		•		•		•		•
Engine OBD – check memory, purge if necessary			•		•		•		•		•		•
Automatic Transmission – check for leaks			•		•		•		•		•		•
Battery – check			•		•		•		•		•		•
Door Arresters – lubricate			•		•		•		•		•		•
Sunroof Frame – lubricate (where applicable)			•		•		•		•		•		•
Cooling System – check coolant level; add if necessary			•		•		•		•		•		•
Exhaust System – check for damage and leaks			•		•		•		•		•		•
Tires/Spare wheel – check condition and pressure			•		•		•		•		•		•
Front Axle – check dust seals on ball joints and tie rods; check tie			•		•		•		•		•		•
rods													
Headlights – check and adjust if necessary			•		•		•		•		•		•
Drive Shafts – check boots			•		•		•		•		•		•
Manual Transmission – check for leaks and level; add if			•		•		•		•		•		•
necessary Road Test – check kick down, braking, steering heating and					•		•		•		•		•
ventilation, air conditioning, power accessories and electrical			•		•		•		•		•		•
systems													
Retractable Hard Top (CSC™roof): check function and for					•				•				•
damage (Eos only)													
Interior lights and Power Outlets - check					•				•				•
Dust and Pollen filter – replace					•				•				•
Wiper Blades – check					•				•				•
Underbody – check for damage					•				•				•
Ribbed Belt – check condition and tension; adjust if necessary					•				•				•
Automatic transmission – check ATF					•				•				•
Automatic transmission final drive oil – check level and for leaks; add if necessary					•				•				•
Power steering – check fluid level (where applicable)					•				•				•
Direct Shift Transmission (DSG) – change fluid and replace filter					•				•				•
Timing Belt – check	1						•		•		•		
Air Cleaner – replace filter and clean housing	+	+							-				•
Spark Plugs – replace							•						•
Timing Belt and tensioning roller – replace	†	<u> </u>											•
	1	1	1			L	L						

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid.

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date).

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available).

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change spark plugs (Only 2.0L TFSI 200 hp) and Air filter element.

© 2006 Volkswagen of America, Inc.



2007 Model Year Volkswagen Maintenance

Date: May 2, 2006 Number: VMS-06-02

	Miles (in the constant)	5	10	20	30	40	50	60	70	80	90	100	110	120
- -	Miles (in thousands)	3	10	20	30	70	30	00	10	00	30	100	110	120
2.5L	Kilometers (in thousands)	8	16	32	48	64	80	96	112	128	144	160	176	180
Engine Oil – chang	ge oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	•
	neck brake pad thickness		•	•	•	•	•	•	•	•	•	•	•	•
•	splay – reset (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Di	splay – adapt (for 10,000 mile /16,000 Km ly) (where applicable)		•											
	r/headlight washer – check level; add if		•	•	•	•	•	•	•	•	•	•	•	•
Brake System – ch	neck for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•	•
Wheels - rotate			•	•	•	•	•	•	•	•	•	•	•	•
Automatic Shift loc position switch	ck - check operation including park/neutral		•	•	•	•	•	•	•	•	•	•	•	•
Rear spoiler – lubr	ricate (New Beetle only)		•	•	•	•	•	•	•	•	•	•	•	•
Tires - check tread	d depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Engine – check for	r leaks			•		•		•		•		•		•
Engine OBD – che	eck memory, purge if necessary			•		•		•		•		•		•
Automatic Transm	ission - check for leaks			•		•		•		•		•		•
Battery - check				•		•		•		•		•		•
Door Arresters – Iu	ubricate			•		•		•		•		•		•
Sunroof Frame - I	ubricate (where applicable)			•		•		•		•		•		•
Cooling System -	check coolant level; add if necessary			•		•		•		•		•		•
Exhaust System -	check for damage and leaks			•		•		•		•		•		•
Tires/Spare wheel	- check condition and pressure			•		•		•		•		•		•
	dust seals on ball joints and tie rods; check			•		•		•		•		•		•
tie rods														
•	k and adjust if necessary			•		•		•		•		•		•
Drive Shafts – che				•		•		•		•		•		•
	ion – check for leaks and level; add if			•		•		•		•		•		•
necessary	. Palada was beed to a standard banks and													
	k kick down, braking, steering heating and ditioning, power accessories and electrical			•		•		•		•		•		•
systems	ultioning, power accessories and electrical													
•	ter – replace (where applicable)					•				•				•
	ace filter and clean housing (New Beetle only)					•				•				•
Wiper Blades - ch	<u> </u>					•				•				•
	Power Outlets – check					•				•				•
Underbody – chec						•				•				•
	ck condition and tension; adjust if necessary					•				•				•
	ssion – check ATF					•				•				•
Automatic transmi	ssion final drive oil - check level and for leaks;					•				•				•
add if necessary	<u> </u>									<u> </u>			<u> </u>	
Spark Plugs – repl	ace					•				•				•
	check fluid level (where applicable)					•				•				•
Direct Shift Transr	nission (DSG) – change fluid and replace filter					•				•				•

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid and check bolting device for convertible top.

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date).

Every 4 years, regardless of mileage (kilometers): Change air filter element and clean housing (New Beetle only).

Every 4 years (for vehicles driven less than 40,000 miles (60,000 Km in 4 years): Change spark plugs.

Every 6 years, (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change air filter element and clean housing (except New Beetle).

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available).

© 2006 Volkswagen of America, Inc.

Air Cleaner - replace filter and clean housing

(where applicable)



2007 Model Year Volkswagen Maintenance

Date: May 2, 2006 Number: VMS-06-02

	Miles (in thousands)	5	10	20	30	40	50	60	70	80	90	100	110	120
3.2L	Kilometers (in thousands)	8	16	32	48	64	80	96	112	128	144	160	176	180

one in the state of the state o	in thousands)	8	16	32	48	64	80	96	112	128	144	160	176	180
Engine Oil – change oil and replace filter		•	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness		•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – reset (where applied)	cable)	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – adapt (for 10,000 m service interval only) (where applicable)	nile /16,000 Km		•											
Windshield washer/headlight washer – check necessary	level; add if		•	•	•	•	•	•	•	•	•	•	•	•
Brake System - check for damage and leaks,	brake fluid level		•	•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate			•	•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation includi position switch	ng park/neutral		•	•	•	•	•	•	•	•	•	•	•	•
Tires – check tread depth and pressure; adjus	st if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks				•		•		•		•		•		•
Engine OBD – check memory, purge if necess	sary			•		•		•		•		•		•
Battery – check				•		•		•		•		•		•
Automatic Transmission – check for leaks				•		•		•		•		•		•
Manual Transmission – check for leaks and le necessary	evel; add if			•		•		•		•		•		•
Door Arresters – lubricate				•		•		•		•		•		•
Sunroof Frame – lubricate (where applicable)				•		•		•		•		•		•
Cooling System – check coolant level; add if r	necessary			•		•		•		•		•		•
Exhaust System – check for damage and leak				•		•		•		•		•		•
Tires/Spare wheel – check condition and pres	sure			•		•		•		•		•		•
Front Axle – check dust seals on ball joints an	nd tie rods; check			•		•		•		•		•		•
tie rods														
Headlights – check and adjust if necessary				•		•		•		•		•		•
Drive Shafts – check boots				•		•		•		•		•		•
Road Test – check kick down, braking, steerir ventilation, air conditioning, power accessorie systems	ng heating and s and electrical			•		•		•		•		•		•
Retractable Hard Top (CSC™roof): check fun damage (Eos only)	ction and for					•				•				•
Automatic transmission – check ATF						•				•				•
Interior Lights and Power Outlets – check						•				•				•
Spark Plugs – replace						•				•				•
Dust and Pollen filter – replace						•				•				•
Wiper Blades – check						•				•				•
Underbody – check for damage						•				•				•
Ribbed Belt - check condition and tension; ad	ljust if necessary					•				•				•
Automatic transmission final drive oil – check	level and for leaks;					•				•				•
add if necessary														
Power steering – check fluid level (where app	,					•				•				•
Direct Shift Transmission (DSG) – change flui (where applicable)	d and replace filter					•				•				•
Air Cleaner – replace filter and clean housing								•						•

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid.

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date)

Every 4 years (for vehicles driven less than 40,000 miles (60,000 Km in 4 years): Change spark plugs.

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change air filter element and clean housing.

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available).

© 2006 Volkswagen of America, Inc.



2007 Model Year Volkswagen Maintenance

Date: May 2, 2006 Number: VMS-06-02

	Miles (in thousands)
3.6L FSI	Kilometers (in thousands)

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

			32					1		1			
Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – reset (where applicable)	•	•	•	•	•	•	•	•	•	•	•	•	•
Service Interval Display – adapt (for 10,000 mile /16,000 Km		•											
service interval only) (where applicable)													<u> </u>
Windshield washer/headlight washer – check level; add if		•	•	•	•	•	•	•	•	•	•	•	•
necessary													<u> </u>
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral		•	•	•	•	•	•	•	•	•	•	•	•
position switch Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks		•		•	•	•	•	•	•	•	•	•	•
Engine OBD – check memory, purge if necessary					•				•		•		
Automatic Transmission – check for leaks							_						
Battery – check			•		•		•		•				•
Door Arresters – lubricate			•				_		•		•		•
Sunroof Frame – lubricate (where applicable)			•		•		•		•				•
Cooling System – check coolant level; add if necessary			•		•		•		•		•		•
Exhaust System – check for damage and leaks			•		•		•		•		•		•
Tires/Spare wheel – check condition and pressure					•		•				_		
Front Axle – check dust seals on ball joints and tie rods; check					•		•		•		•		<u> </u>
tie rods			•		•		•		•		•		•
Headlights – check and adjust if necessary					•		•		•		•		•
Drive Shafts – check boots			•		•		•		•		•		•
Road Test – check kick down, braking, steering heating and			•		•		•		•		•		<u> </u>
ventilation, air conditioning, power accessories and electrical			-		_				-		_		1
systems													ĺ
Interior lights, Horn and Power Outlets – check function					•				•				•
Air Suspension – check for leaks and damage (Touareg only)					•				•				•
Dust and Pollen filter – replace					•				•				•
Wiper Blades – check					•				•				•
Underbody – check for damage					•				•				•
Ribbed Belt – check condition and tension; adjust if necessary					•				•				•
Automatic transmission – check ATF					•				•				•
Automatic transmission final drive oil – check level and for leaks;					•				•				•
add if necessary													
Power steering – check fluid level (where applicable)					•				•				•
Haldex clutch – check fluid level (where applicable)					•				•				•
Direct Shift Transmission (DSG) – change fluid and replace filter					•				•				•
(where applicable) Spark Plugs – replace													_
							_					-	•
Air Cleaner – replace filter and clean housing							•						•
Air Cleaner – replace filter and clean housing and snow filter (Touareg only)									•				
(Toualey Offiy)	<u> </u>	l	1	<u> </u>		<u> </u>	<u> </u>			L		<u> </u>	<u> </u>

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid.

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date).

Every 4 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change air filter element and clean housing.

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change spark plugs

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available)

© 2006 Volkswagen of America, Inc.



2007 Model Year Volkswagen Maintenance

Date: May 2, 2006 Number: VMS-06-02

Miles (in thousands)
4.2L FSI Kilometers (in thousands)

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

	•	10	JŁ	40	04	00	90	112	120	144	100	170	100
Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•	•
Windshield washer/headlight washer – check level; add if		•	•	•	•	•	•	•	•	•	•	•	•
necessary													
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral		•	•	•	•	•	•	•	•	•	•	•	•
position switch													
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Engine – check for leaks			•		•		•		•		•		•
Engine OBD – check memory, purge if necessary			•		•		•		•		•		•
Automatic Transmission – check for leaks			•		•		•		•		•		•
Battery – check			•		•		•		•		•		•
Door Arresters – lubricate			•		•		•		•		•		•
Sunroof Frame – lubricate (where applicable)			•		•		•		•		•		•
Cooling System – check coolant level; add if necessary			•		•		•		•		•		•
Exhaust System – check for damage and leaks			•		•		•		•		•		•
Tires/Spare wheel – check condition and pressure			•		•		•		•		•		•
Front Axle – check dust seals on ball joints and tie rods; check			•		•		•		•		•		•
tie rods													
Headlights – check and adjust if necessary			•		•		•		•		•		•
Drive Shafts – check boots			•		•		•		•		•		•
Road Test – check kick down, braking, steering heating and			•		•		•		•		•		•
ventilation, air conditioning, power accessories and electrical													
systems													
Air Suspension – check for leaks and damage					•				•				•
Interior lights, Horn and Power Outlets – check function					•				•				•
Dust and Pollen filter – replace					•				•				•
Wiper Blades – check					•				•				•
Underbody – check for damage					•				•				•
Ribbed Belt – check condition					•				•				•
Automatic transmission – check ATF					•				•				•
Automatic transmission final drive oil – check level and for leaks;					•				•				•
add if necessary													
Power steering – check fluid level (where applicable)					•				•				•
Spark Plugs – replace							•						•
Air Cleaner – replace filter and clean housing and clean snow									•				
screen (if available)													
Timing Belt – replace			1	l		l			•				

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid.

Every 2 years (for vehicles driven less than 40,000 miles (60,000 Km) in 2 years): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date).

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available).

Every 6 years (for vehicles driven less than 60,000 miles (90,000 Km in 6 years): Change spark plugs.

© 2006 Volkswagen of America, Inc.



2007 Model Year Volkswagen Maintenance

Date: May 2, 2006 Number: VMS-06-02

5.0L V10

Miles (in thousands)
Kilometers (in thousands)

5	10	20	30	40	50	60	70	80	90	100	110	120
8	16	32	48	64	80	96	112	128	144	160	176	180

Engine Oil – change oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	•
Brake System – check brake pad thickness	•	•	•	•	•	•	•	•	•	•	•	•	•
Water Separator – drain	•	•	•	•	•	•	•	•	•	•	•	•	•
Windshield washer/headlight washer - check level; add if		•	•	•	•	•	•	•	•	•	•	•	•
necessary													
Brake System – check for damage and leaks, brake fluid level		•	•	•	•	•	•	•	•	•	•	•	•
Wheels – rotate		•	•	•	•	•	•	•	•	•	•	•	•
Automatic Shift lock - check operation including park/neutral		•	•	•	•	•	•	•	•	•	•	•	•
position switch													
Tires – check tread depth and pressure; adjust if necessary		•	•	•	•	•	•	•	•	•	•	•	•
Turbocharger – lubricate servomotor rods			•		•		•		•		•		•
Engine – check for leaks			•		•		•		•		•		•
Engine OBD – check memory, purge if necessary			•		•		•		•		•		•
Automatic Transmission – check for leaks			•		•		•		•		•		•
Battery – check			•		•		•		•		•		•
Door Arresters – lubricate			•		•		•		•		•		•
Sunroof Frame – lubricate (where applicable)			•		•		•		•		•		•
Cooling System – check coolant level; add if necessary			•		•		•		•		•		•
Exhaust System – check for damage and leaks			•		•		•		•		•		•
Fuel Filter – replace			•		•		•		•		•		•
Tires/Spare wheel – check condition and pressure			•		•		•		•		•		•
Front Axle – check dust seals on ball joints and tie rods; check			•		•		•		•		•		•
tie rods													
Headlights – check and adjust if necessary			•		•		•		•		•		•
Drive Shafts – check boots			•		•		•		•		•		•
Road Test – check kick down, braking, steering heating and			•		•		•		•		•		•
ventilation, air conditioning, power accessories and electrical													
systems													
Battery and Second Battery – check					•				•				•
Air Suspension – check for leaks and damage					•				•				•
Interior lights, Horn and Power Outlets – check function					•				•				•
Dust and Pollen filter – replace					•				•				•
Wiper Blades – check					•				•				•
Underbody – check for damage					•				•				•
Ribbed Belt – check condition					•				•				•
Automatic transmission – check ATF					•				•				•
Automatic transmission final drive oil – check level and for leaks; add if necessary					•				•				•
Power steering – check fluid level (where applicable)					•				•				•
Diesel Particle Filter – replace (if available)									•				
Air Cleaner – replace filter and clean housing and clean snow screen (if available)									•				

Every 12 months, regardless of mileage (kilometers): Perform visual check of airbag system.

Every 2 years, regardless of mileage (kilometers): Change brake fluid.

Every 2 years, regardless of mileage (kilometers): Replace dust and pollen filter.

Every 4 years, regardless of mileage (kilometers): Tire filler bottle in tire mobility set is replaced (Observe expiration date).

Every 6 years, regardless of mileage (kilometers): Change tire pressure sensors (If available)

© 2006 Volkswagen of America, Inc.